


FC-7664PRO USER MANUAL

ANTI-THEFT ALARM CONTROLLER

This manual is for reference only and will not be notified
if there is any version update.

P/N: 23151102B12

Wiring Diagram

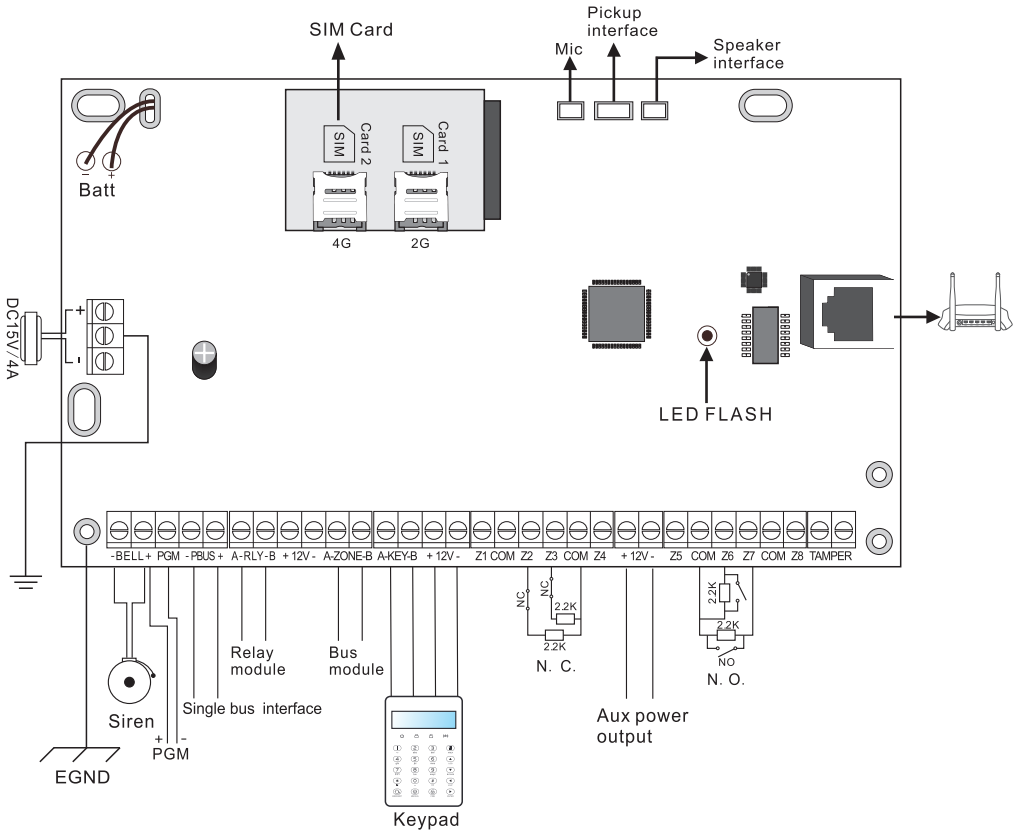

Power supply

The power supply is DC15V/4A switching power


- Use 12VDC, 7Ah sealed lead-acid battery, and replace it every 3-5 years.
- A standard system with a keyboard power consumption of 180mA can support 24 hours.
- When using without siren, connect a 2.2K resistor to clear the siren fault.
- The total power supply demand of the keyboard, auxiliary power supply, siren, etc. does not exceed the maximum power of the host.
- The maximum charging current of the battery is 350mA.
- When using wired/bus defense zones, you need to set the defense zone attributes in the defense zone attribute settings.

Warning: If you need to use SIM card, please insert SIM card before installation, then power on.

Wired Siren Wiring Instructions

When wiring with wired siren,
please refer to the following connection method:


Figure 1:

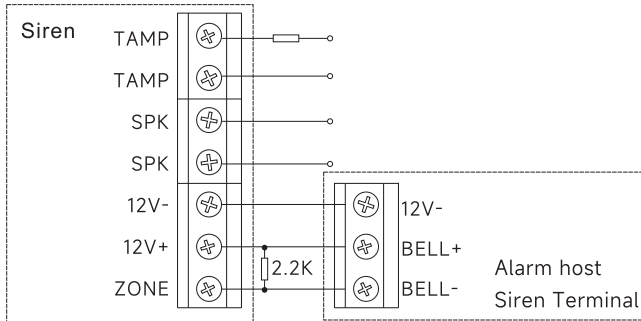

Low level alarm connection


When the input voltage of the ZONE terminal
falls below 1V, an alarm will be triggered

 Figure 2:



Z-08 Expansion Module Description

Wiring instructions

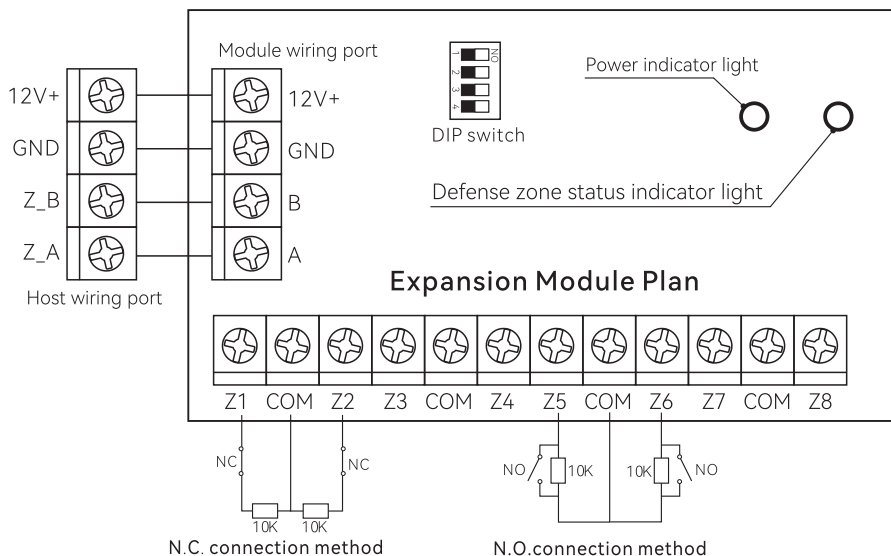

Light

Power indicator: always on when power is on;

Zone status indicator: Zone is enabled and flashes slowly when normal
When the zone is faulty, it always lights up.

Dialing code description

Please dial the code according to the table below.

NO.	DIP SW#	Zone#	NO.	DIP SW#	Zone#
1	1111	41~48	5	1101	73~80
2	0111	49~56	6	0101	81~88
3	1011	57~64	7	1001	89~96
4	0011	65~72			

Content

Foreword	1
Features	2
Led instruction of network alarm platform	2
Insert SIM card	2
Panel led instruction	3
Insert SIM card	3
Remote phone control	4
Take alarm call from alarm panel	4
GSM SMS remote control	5
FC-7602 Dual Zone Expansion Module	5
keypad instructions	7
Wiring instructions	7
Keyboard address setting	7
Function button	8
Led lights	8
Common operation	9
Public zone	11
Duress password	12
Arm/disarm alarm panel	13
Alarm procedure	14
System maintenance	15
Programmable output	16
I. System setting	17
1. Set sys password	17
1.1 Set admin pwd	17
1.2 Set main user code	18
1.3 Set user code	18
2. Set system network	18
2.1 Set DHCP	18
2.2 Set IP	19
2.3 Set gateway	19
2.4 Set subnet mask	20
2.5 Set DNS	20
3. Set CMS	20
3.1 Phone ala center	20
3.1.1 Set CMS line 1	21

3.1.2 Set CMS line 2	21
3.1.3 Set account	21
3.1.4 Enter dial times	21
3.2 Network CMS	22
3.2.1 Set server IP	22
3.2.2 Set server port	22
3.2.3 Set CMS account	22
3.3 SIA platform	23
4. Set voice phone	23
4.1 Voice phone	23
4.2 Phone dial times	23
5. Set SYS options	24
5.1 System time	24
5.2 Entry delay	25
5.3 Exit delay	25
5.4 Bell time	25
5.5 Force arm	26
5.6 Emergency tone	26
5.7 AC power off delay	26
5.8 Door sensor check	27
5.9 WLS sensor loss	27
5.10 Voice prompt	27
6. Set wireless	28
6.1 Set remote	28
6.1.1 Enroll remote	28
6.1.2 Enter remote code	28
6.1.3 Delete remote	29
6.2 Set WLS detector	29
6.2.1 Enroll detector	30
6.2.2 Enter code	30
6.2.3 Delete detector	31
6.3 Set WLS siren	31
6.3.1 Enroll siren	31
6.3.2 Delete siren	32
6.4 RF switch	32
6.4.1 Enroll switch	33
6.4.2 Enter switch code	33
6.4.3 Delete switch	33
7. Set system zone	34

7.1 Set zone type	35
7.2 Set zone siren	36
7.3 Doorbell tone set	36
7.4 Keyboard zone	37
8. Set system area	38
8.1 Password area	38
8.2 Keypad area	39
8.3 Remote area	39
8.4 Zone area	39
8.5 Voice phone area	40
8.6 Slect partition	40
9. Set other	41
9.1 Wired zone	41
9.2 Relay	42
9.3 SIM card set	42
9.3.1 SIM default set	43
9.3.2 SIM card 1 set	43
9.3.3 SIM card 2 set	43
9.4 Timing arm/disarm	44
9.5 Single bus device	44
9.5.1 Device status	45
9.5.2 Device info	45
9.5.3 Device option	45
9.5.4 Device restart	46
9.5.5 Restore to fact	46
9.6 Keypad fault disp	47
10. Advanced set	48
II. WEB setting	50
1. Access to the host	50
2. Basic management	51
2.1 System Kanban	51
2.2 System management	52
2.3 Wireless device	53
2.4 Single bus device	54
2.5 Smart control	54
2.6 Scene management	54
2.7 Other settings	56
2.7.1 Wired zone settings	56

2.7.2 Bypass group setting	57
2.7.3 Relay settings	57
2.7.4 Keyboard area settings	57
2.7.5 Keyboard fault display	58
2.8 System log	58
3. Network settings	59
3.1 TCP/IP settings	59
3.2 GPRS settings	60
3.3 Email settings	60
3.4 CMS platform	61
3.5 SIA platform	62
3.6 PSTN alarm platform settings	64
4. System options	64
4.1 Alarm parameter settings	64
4.2 Alert settings	66
4.3 Password settings	67
4.4 Voice call settings	68
4.5 Timing Arm/Disarm	69
5. System maintenance	70
5.1 System information	70
5.2 Time settings	70
5.3 System restart	71
5.4 System backup	72
5.5 System restore	72
5.6 System upgrade	73
5.7 Reset device	73
III. App use	74
1. Download and installation	74
2. Account registration	74
3. Add panel	75
Technical specifications	76
System maintenance	76
Product function limitation	77

Foreword

Thank you for choosing the "FC" series products . Congratulations on your obtaining a set of reliable and multi-functional security products that have been tempered and passed a variety of certifications.

"FC-7664PRO" is an intelligent anti-theft alarm control panel that integrates anti-theft, fire prevention and gas leakage prevention, and is compatible with wired and wireless alarm methods. Remote operation through the Internet, mobile phone APP, CMS, etc. greatly facilitates the user's control of security information.

The "FC-7664PRO" also uses the most advanced international BUS zone coding technology and multi-digit random code hopping technology in terms of safety and reliability, which effectively avoids the interference and false alarms that are difficult to solve by the current similar systems. The "FC-7664PRO" supports the international SIA-2013 network GPRS in the alarm signal transmission mode, and also adopts the high-speed Contact ID format commonly used in the world, which makes the system more widely used and more compatible. This system can be widely used in family districts, villas, shops, enterprises and institutions and so on. In order to better use this product, please read this manual before use.

This manual has been checked in detail by the technicians, such as product upgrades and changes without notice.

Warning:

- A.** Do not disassemble or modify, otherwise it may cause danger and cause damage to the machine.
- B.** Do not put other objects into the machine. Metal objects, water and flammable objects are all prone to short circuit or fire.
- C.** To avoid injury, do not drop the machine or subject it to strong impact.
- D.** Do not install the machine near a magnetic field, it may cause unstable operation.
- E.** Keep dry and clean. Do not set it in a place with oily smoke or steam, high temperature or a lot of dust.
- F.** Avoid high temperatures. Please do not install the unit near a heater or other high-temperature equipment, such as near a spotlight; also do not place it in a place that is easily exposed to direct sunlight, otherwise it may cause color fading. When cleaning, please wipe with a soft cloth. To remove dirt, you need to use detergent solution. Wipe after wringing out.
- G.** Never use chemicals such as gasoline or paint thinner, otherwise it may cause damage or paint peeling.

Features

▲ Can be divided into 4 independent areas, with 32 wireless zones, 8 wired zones, 56 expansion zones can be expanded by bus port (including 24 keyboard expansion zones and 32 bus zones), 32 single-bus zones, total support 128 zones.

▲ The device has 1 web administrator account, 1 system administrator password, 1 main user, and 32 ordinary users. In addition to the system administrator password, other accounts can log in to the web page to access the host.

▲ Support 8 remote controls, 4 two-way wireless siren, 8 keyboards, 32 appliance switches.

▲ Support 2 network alarm receiving platforms and 2 telephone alarm receiving platforms, which can be set to backup mode and dual alarm mode

▲ Support 4 voice phones to send voice and text messages

▲ Support mobile APP remote control and alarm information push

▲ Timing arm and disarm: 4 groups of timing arm and disarm time, you can assign any one or several partitions to be effective.

▲ Two SIM cards can be inserted, and the priority SIM card can be set.

Led instruction of network alarm platform

LED ON——Network is normal

Fast flashing——network failure

Flash once per second——connected 1 platform via network

Flash twice per second——connected 2 platforms via network

Flash once in 3 seconds——connected 1 platform via GPRS

Flash twice in 3 seconds——connected 2 platforms via GPRS


Panel led instruction

Arm and disarm status LED: Area 1, LED is always ON when armed, LED is OFF when disarmed, flash once every second when stay armed


Alarm LED:Area 1, flashes when alarming, LED always ON when zone fault, LED flashes once per second when AC or battery fault

Network LED: LED is always ON when the network is normal, LED is OFF when the network is fault, and LED flashes quickly when the network is connected to the platform.


GSM status LED: LED flashes once in 3 seconds when GSM is normal, LED flashes once in 1 second when GSM is fault, and LED flashes quickly when GPRS connects to the platform.

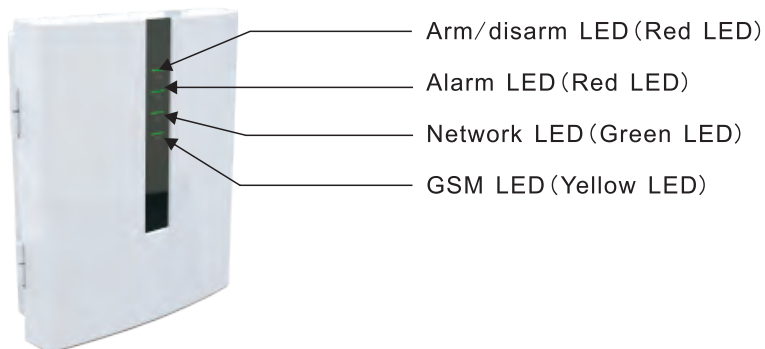

Insert SIM card: The telephone card is Micro SIM .

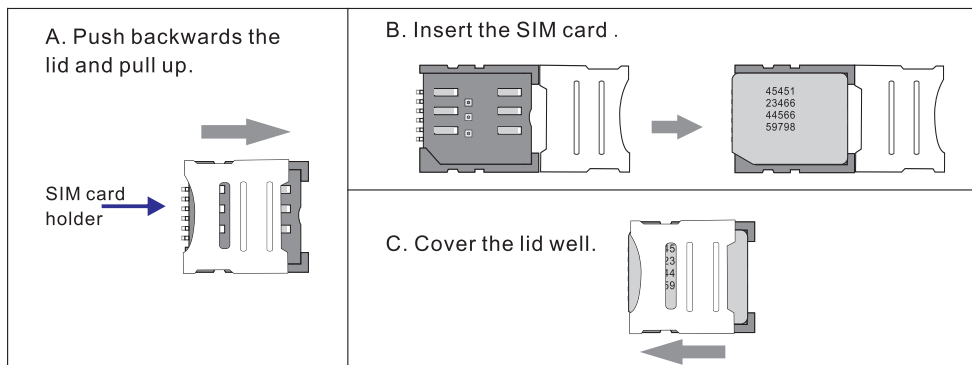


Remote phone control

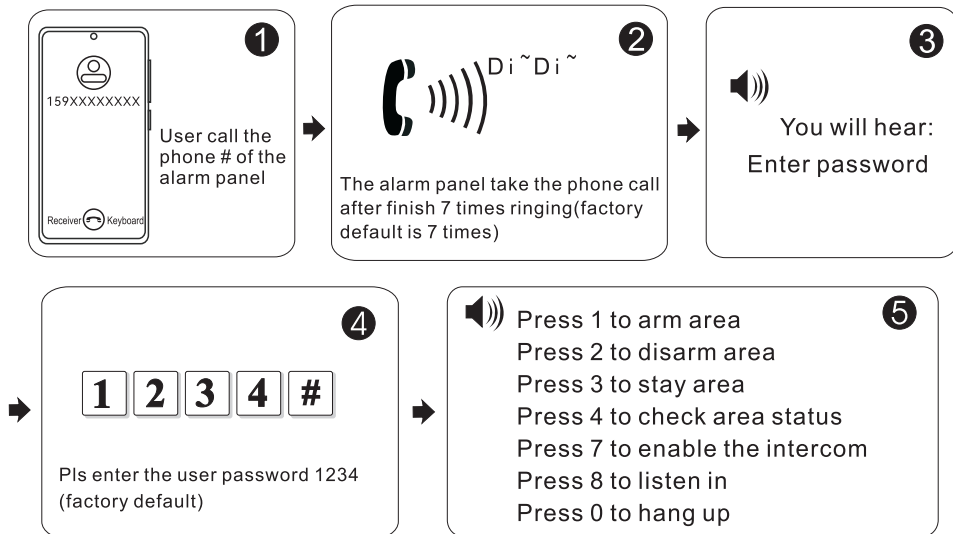

Take alarm call from alarm panel

The alarm panel will call the user when alarm happens. see below diagram.

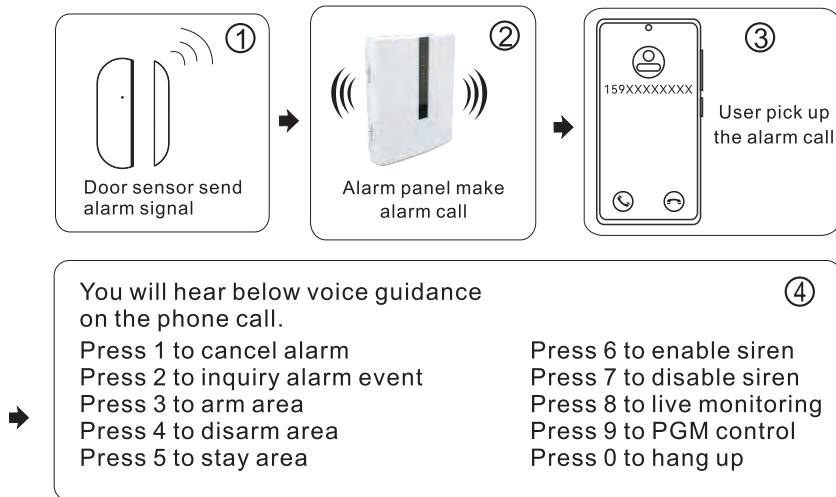

GSM SMS remote control

Arm command:

Enter the sms command on phone `#PASSWORD:1234#ARMED AREA X`

Disarm command:

Enter the sms command on phone `#PASSWORD:1234#DISARM AREA X`

Stay arm command:


Enter the sms command on phone `#PASSWORD:1234#STAY AREA X`

Note: X is the area #, from 1 to 4. Default use password 1234(no space). You will receive a reply sms message if the panel accept and proceed your SMS command.

FC-7602 Dual Zone Expansion Module

The starting zone number of the FC-7664PRO mainframe extended zone is 41.

DIP code example:

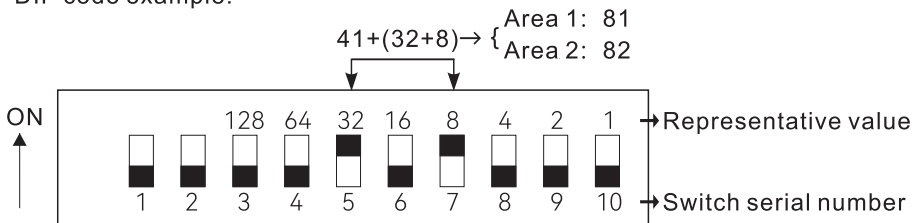


The black square "■" is the position of the dial.


1. FC-7602 is a dial-code address code zone module, and the end resistance of the connected line is 10K.
2. Dial switch 1 is used to set single and dual defense zones, ON is for dual defense zones, and OFF is for single defense zones; 2 is the anti disassembly switch, 3-10 is the module extension address, and the defense zone type is disabled by default. When using it, the corresponding defense zone needs to be enabled.
3. The address range can be set to 41-96.
4. Wiring method: red wire (DC+), black wire (GND), yellow wire (RS487A), white wire (RS487B), green wire (NC1), black wire (GND), blue wire (NC2).
5. Operating voltage range: DC8.5~24V.
6. The second position of the dial switch is the anti disassembly detection

switch, with ON turning on the anti disassembly detection switch and OFF turning off the anti disassembly detection switch; 3-10 is the address bit, ON is valid, OFF is invalid, and the address calculation method is binary. For example, for defense zone 1 address 81, the dials for positions 5 and 7 need to be set to ON, while for defense zone 2 address 82.

The set defense zone 1 address is a dial value of +41, and defense zone 2 address is defense zone 1 address+1.

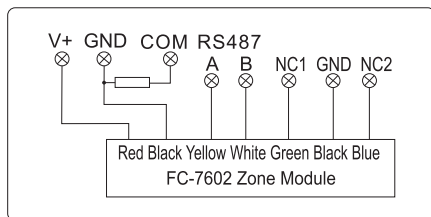


NO TAMPER

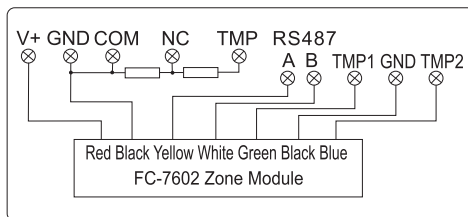


TAMPER

Keypad instructions

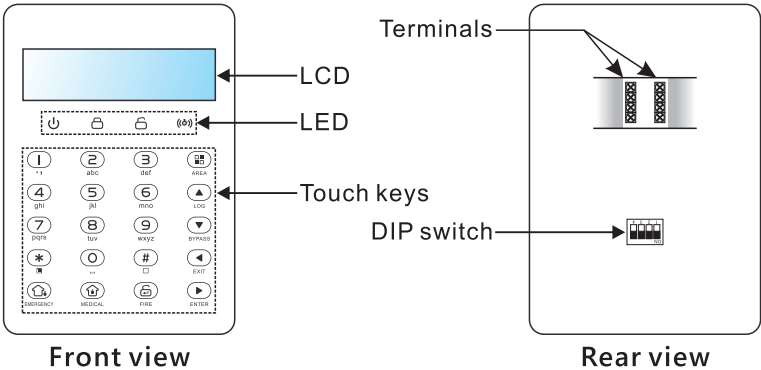


Wiring instructions

Please follow the wiring diagram below to connect.

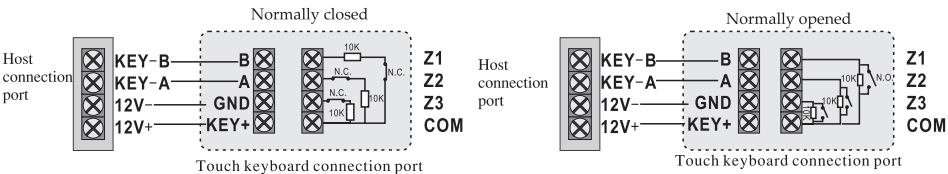





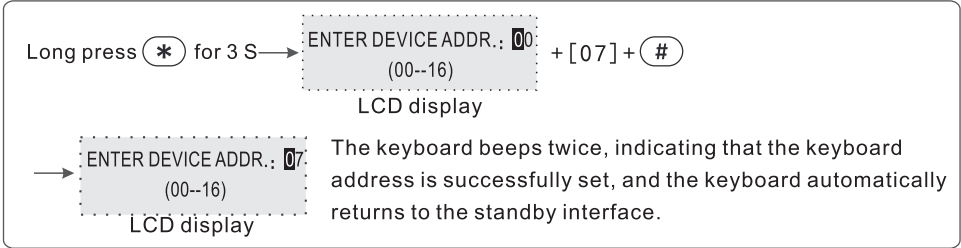



Keyboard address setting





After accessing the new keyboard, the keyboard shows that no address has been set. Please press and hold **(*)** for three seconds when disarmed and in the standby state to enter the keyboard address setting. Up to 8 keyboards can be added. For example: add keyboard as address 07.



Function button

Icon	Meaning	Instructions
 EMERGENCY	Arm	The button can set arm multiple partitions at one time, and can also arm individual partitions separately. Press and hold for 3 seconds for emergency alarm
 MEDICAL	Stay	The button can set multiple partitions to stay status, and can also set stay on a single partition. Press and hold for 3 seconds for medical care
 FIRE	Disarm	The button can disarm for multiple zones ,or disarm the individual zones individually. Press and hold for 3 seconds for fire alarm
 AREA	Area	With Arm, Disarm, Stay to operate on a single Area.
 LOG	Up arrow	Select upward; long press for 3 seconds to increase the Volume; event record query
 BYPASS	Down arrow	Down select; long press for 3 seconds to decrease the Volume
 EXIT	Return key	Return to previous menu/exit menu
 ENTER	Enter key	Enter options

Led lights

Icon	Meaning	Instructions
	Power Indicator	On - normal power supply; Flash - AC power failure; Slow flash - battery failure; Off - AC and battery failure
	Arming indicator	On - all partitions in the management area; Flash - partition alarm; Slow flashing - Partial arming and disarming of managed zones
	Disarm indicator	On - all administrative divisions are disarmed; Flash - The zone of the managed zone is faulty. Slow Flash - Partition Zones Managed By Bypass
	Fault indicator	On - configuration parameter check error; Flash - platform connection and communication failure; Slow flash - network, GSM, PSTN failures; Off - No failure

Support 8 keypad. Pls scan and add keypad after repower the alarm panel. The keypad will not work if add without repower the alarm panel, in this case, you can re-scan to add the keypad on a keypad which already work by the command admin PW[012345]*9#. Each keypad is with a different address. The first time connect the keypad, it will display fault event. Like battery problem, network problem etc.. , you can choose the event to display on WEB MENU.

COMMON OPERATION


Default admin password is 012345, main user password is 1234. If you change it, please refer to the change.

Enter project settings: [012345]+ [*] +[0]+ [#]


Device restart: [012345]+ [*] +[1]+ [#]

Single area arm/disarm: Area password+ [🏠] +area No. + [🏠] / [🏠] / [🔒]

Armed password area and keyboard management area and area where the inputted area intersects.

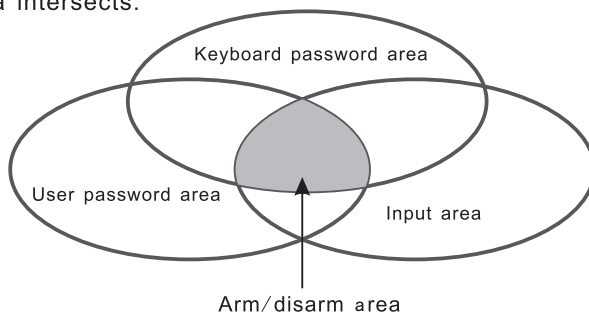

Multiple areas arm/disarm: Area password+ [🏠] / [🏠] / [🔒] Arm/disarm all the areas where the password area and the keyboard management area intersect.

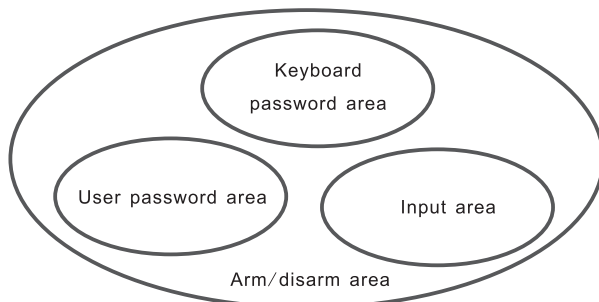

One-key arm: Press / , or press Area No. + /

Instant Arm: + / , or user password+ + Area No.

Event logs: Press in the standby mode to view the event log, Up to 800 event records can be stored cyclically.

Enter the bypass zone: the keyboard will display the bypassed zone after the zone is bypassed, Only the zone belonging to the password management zone can be bypassed. Only one keyboard is allowed to enter the bypass setting at the same time. When one keyboard is in the bypass setting state, an error will be prompted when the other keyboards try to enter the bypass setting. But when there is a higher authority request, if you enter the system setting, it will exit the bypass setting

Zone bypass: User password+ ; the zone can be bypassed only when the password has full control authority of the zone.

Bypass group: Main user password+ + + [1-4] (area) +

Recording: [012345]+ + [8] + enter the recording control interface, Press to start recording, Press to stop recording, When you stop recording, press to exit the recording interface, and it will automatically exit if there is no operation for 10 seconds.

Recording playback: When the voice call is answered, the recording will be played automatically, and then the operation prompt tone will be played.

Version display and device scan: [012345]+ + [9] + display the system version and rescan the new devices added by the keyboard terminals.

Keyboard key tone adjustment: in the standby mode, long press / , the keyboard emits a "di~di~" sound to increase/decrease a volume.

View automatic APN: Press + [4] + to view card 1's automatic APN; Press + [5] + to view the automatic APN of card 2.

Forgot password: Within 1 minute of powering on the host, enter [000000]+ + [0] + on the keyboard, or log in with the password "000000" on the web page to repair the user's forgotten password.

Note: Area 1 is the main area. When area 1 is disarmed, the device can enter the setting state. Only when the keyboard has the authority to manage area 1 can enter the system setting.

Public zone

When a zone belongs to multiple areas, this kind of zone is called a public zone, which is mainly used in shared passages and other places. The public zone will only alarm when the zone where it is located has alarm conditions, and when it is a delayed zone, If any area it belongs to cancels the alarm, the other areas it belongs to will also cancel the alarm; and if the zone alarms, all the areas it belongs to will alarm.

(1) The public zone will only alarm when all the areas it belongs to have its alarm conditions.


(2) Based on the reason (1), it is not recommended to set the public zone as an internal zone. It is better to set it as a delayed zone. When set to a delayed zone, the exit delay will only expire after the last operation arming zone exits and the public zone for unrecovered areas alarms, the last operator will handle the failure without affecting other area users. When the entry delay is triggered, all areas where it is located will be in the entry delay alarm. Before the delay ends, If any zone where the system is located is disarmed, the zone that is in the entry delay alarm caused by the public zone will cancel the delay alarm. Otherwise, when the delay is over, all zones where the public zone is located will alarm.

Duress password

When you enter the duress password, you will trigger an duress alarm. If enter duress password When the system is under arm status, keypad will display system is disarmed, stop siren but send alarm info and alarm call.

(pls set the CMS phone # and follow me phone #)

Example, A arm the system, B enter the area and trigger alarm, B threaten A disarm the system. A enter the duress password. The alarm panel will show disarm status but will send alarm info can call.

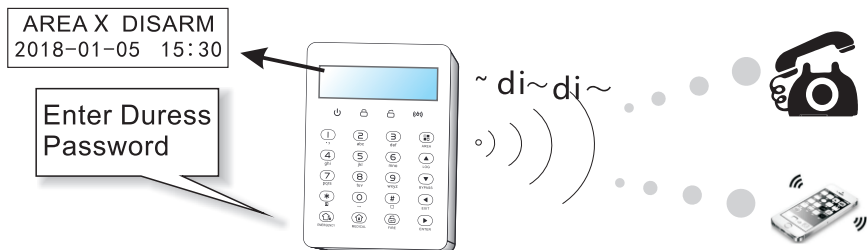

Arm/disarm alarm panel


☆ Arm



AREA X ARM
2018-03-25 15:30

Corresponding user password + or press disarm button remote control.


☆ Disarm

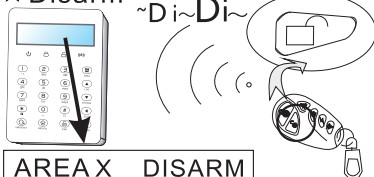

AREA X DISARM
2018-03-25 15:30

Corresponding user password + or by pressing the disarm button of the corresponding remote control.


☆ Panic alarm

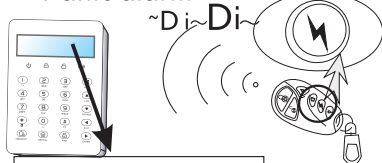

AREA X ALARM
2018-03-25 15:30

Press and hold for or press the "emergency" button on the remote control for emergency help. Press and hold for to achieve "fire alarm".

☆ Stay

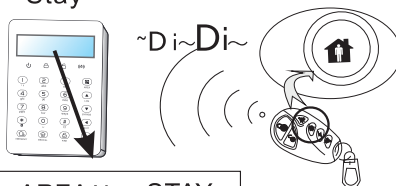

AREA X STAY
2018-03-25 15:30

Corresponding user password + or press the home security button of the corresponding remote control.

The codes of arm/disarm via different ways:

Keyboard to quickly arm, the number represented is 0

Arm/disarm via remote controls: 1-8 remotes ---# 141-148

Arm/disarm via master user password: #190

Arm/disarm via user passwords: 1-32 user passwords ---# 191-222

Arm/disarm via voice call: 1-4 voice call ---#160-163

Arm/disarm via CMS: #150


Arm/disarm via auto timer: # 170

Arm/disarm via key zone: # 180

Arm/disarm via WEB page: #155

Arm/disarm via keyboard zone is: #129-136

Alarm procedure

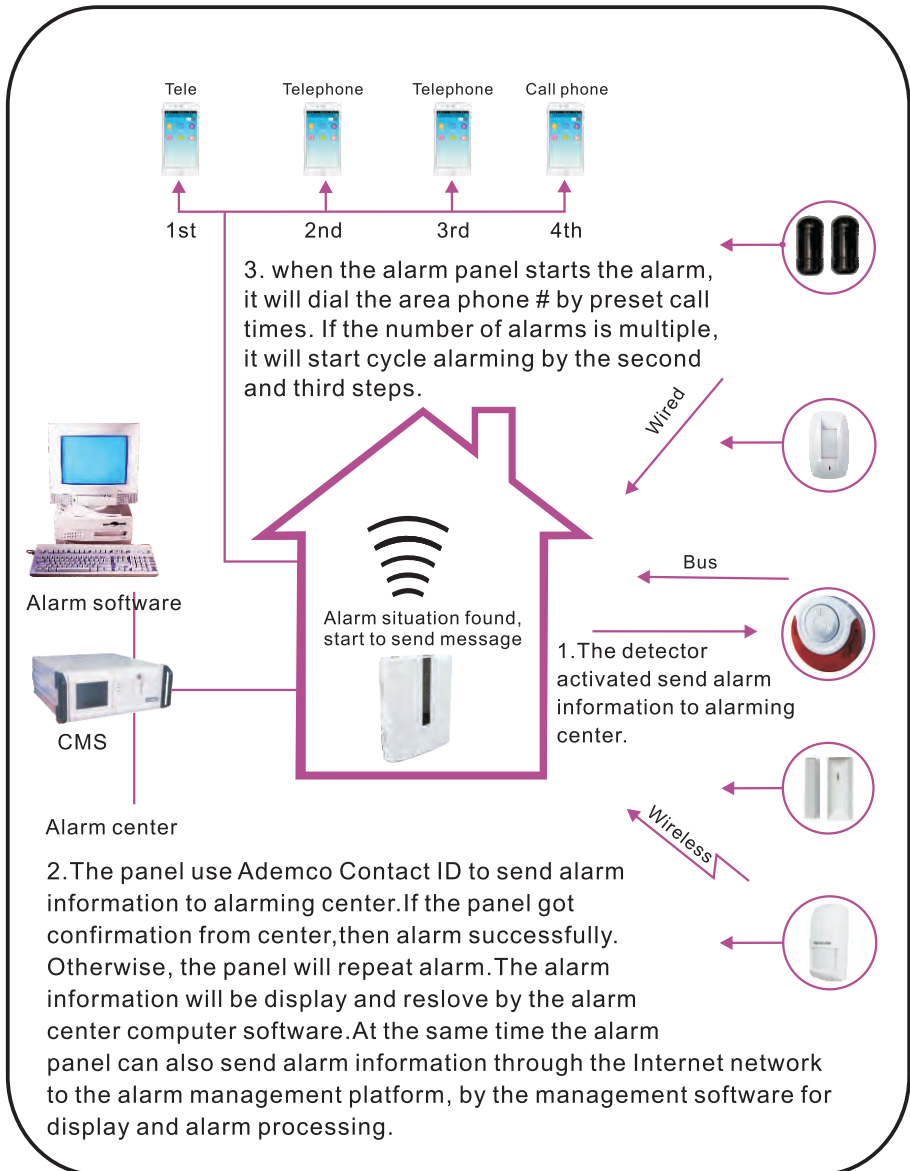

System maintance

Pls make the below test before installation.

Communication test: main user password+*1#;

battery test: main user password+*2#.

Siren test: main user password+*3#

Walk test: main user password+*4# (disarm all area before start walk test)

1)Communication test: test the communication between alarm panel and CMS.

Main user password+  +[1]+  → CMS will receive timing test report message

2)Battery test

Main user password+  +[2]+  → 5 mins after CMS will receive battery status message



 
You can not start the alarm panel with only battery connect. But trigger the battery by AC power first. One battery test take about 4 mins, so, it will take at least 5 hours to report battery recover. When AC power is normal, battery test proceed every 24 hours. If battery disconnect, it will test battery every 10 mins. When battery voltage is low, it will test battery every 60mins. When AC power trouble, it will test battery every one minute.

 
3)Siren test: test the communication between siren and alarm panel


Main user password+  +[3]+  → trigger siren→siren sound

4)Walk test

example: walk test at zone 8



[1234] +  +[4]+  →  → trigger zone 8

→ 

press  back to standby interface

5) Wireless switch management

The wireless switch can realize the alarm linkage output with the corresponding defense zone, and 32 wireless switches can be set.



Main user password+  +[5]+  → Enter wireless switch management

Programmable output


According to the set state parameters, when a specified event or state occurs, the programming output port voltage changes from 0V to 12V. 1 PGM output ports can be set.Set the trigger event on the web (*Note: this machine does not support telephone lines), as follows:

Burglary Recovery Panic	Area Alarm, Area Fault, Area Bypass, System Arm, System Disarm, System Stay, Cancel Alarm, Fault Recovery, Bypass Recovery, Failed to arm the system
Zone Event	Delay 1 alarm, Delay 2 alarm, Perimeter alarm, Internal alarm, Emergency alarm, 24 hours alarm, Fire alarm, Flooding alarm,Emergency, Dismantle alarm, Wireless device battery failure, Wireless device battery recovery, Lost wireless device, Zone bypass, Zone bypass recovery, Zone loop failure, Zone loop recovery, Delayed alarm recovery, Perimeter alarm recovery, Internal alarm recovery, Emergency alarm recovery, 24 hours alarm recovery, Fire alarm recovery, Emergency recovery, Dismantling alarm recovery, Wireless device loss recovery, Flooding recovery
System Event	Low system battery,System AC power failure,System AC power recovery,System programming changes,Communication test,System battery recovery,System communication failure,Zone bypass recovery, Alarm failure, Alarm recovery, Hold the alarm, Telephone line failure, Telephone line restoration , Module removal, Wrong password, Dismantle alarm,Tamper alarm recovery,Emergency alarm,Emergency alarm recovery, Emergency,Emergency recovery,Fire alarm,Fire alarm recovery,Network fault,Network Recovery,GSM faulty,GSM normal,CMS connection faulty,CMS connection normal,SIA connection faulty,SIA connection normal,System programming entry,System programming exit,System battery loss,System battery loss recovery,System battery failure,System battery failure recovery


Press the main user password+[*6#] or open or close the programming output port by voice call. (Default is off)
Example: set PGM to Open.

Main user password+  +[6]+  →

Input PGM NO.: 1
(1--4)

+  →

PGM operation: 1
1>Open 2>Close

 +[1]+ 

I. System setting

[012345] + * + [0] + #

- 1.SET SYS PASSWORD
- 2.SET SYS NETWORK
- 3.SET CMS
- 4.SET VOICE PHONE
- 5.SET SYS OPTIONS
- 6.SET WIRELESS
- 7.SET SYSTEM ZONE
- 8.SET SYSTEM AREA
- 9.SET OTHERS
- 10.ADVANCED SET

Note: only in disarm status, user can do system setting.

1.Set sys password

[012345] + * + [0] + # + #

- 1.ADMIN PWD
- 2.MAIN USER PWD
- 3.USER PASSWORD


The central panel has one admin password, one main user password, 32 user password and Web login password. password can control one or more system area.

The password's right on keypad is decided by the system area the password can control and the system area the keypad can control.

For example:

If user sets password No. 6 can control area 1, 2, 3, the keypad No. 5 can control area 3,4.

Then the user can only control area 3 on keypad No. 5 via password No. 6

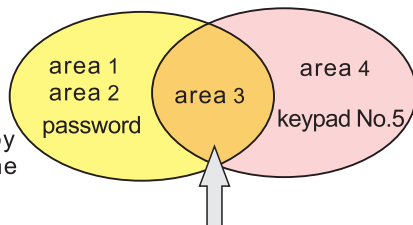

password No.6 can only control area 3

1.1 Set admin password

Admin password has the highest authority. E.g, set admin password as 555555.

[012345] + + [0] + + + → ENTER PASSWORD: *****
LCD display

+ + [555555] +
Press 6 times to delete the old password

The keypad will beep twice to confirm the password has been changed.

+ + Back to standby interface.

Tips: if forget admin password or web login password, please follow: Power off the central panel, and power on again, within 60s, enter 000000 as password to operate and set new password.

1.2 Set main user password

Please refer to user setting I

1.3 Set user password

User password is 4~6 digits. E.g Set user password no. 03 as 0000

[012345] + + [0] + + + [3] + → ENTER PASSWORD#: 01
(01-32)
LCD display

+ [03] + + ENTER PASSWORD: + [0000] + → ENTER PASSWORD#: 04
(01-32)
LCD display

The keypad will beep twice to confirm the password has been changed.
After this, the keypad will enter to set next password no. , press

+ + + back to standby interface.

2.Set system network

[012345] + + [0] + + [2] + →




- 1] SET DHCP
- 2] SET IP
- 3] SET GATEWAY
- 4] SET SUBNET MASK
- 5] SET DNS

2.1 Set DHCP (Default disable)

User can choose to enable or disable DHCP function.Eg. Enable DHCP function

[012345] +  + [0] +  + [2] +  +  → DHCP:
1>DISABLE 2>ENABLE
LCD display

+ [2] + 

The keypad will beep twice to confirm it has been changed, the keypad will return to previous setting Press  +  +  back to standby interface.

2.2 Set IP


Factory default IP: 192.168.1.200

Tips: *If DHCP is enabled, then it is not able to set IP here.*

E.g. Set IP as “192.168.1.81”, we need to enter “192168001081” in the keypad. User need to add “0” to make 3 digits if not enough. After set, please power off the central panel and restart to make the IP effective.





[012345] +  + [0] +  + [2] +  + [2] +  → ENTER IP:
000.000.000.000
LCD display


+ [192168002081] + 




The keypad will beep twice to confirm it has been changed, the keypad will return to previous setting. Press  +  +  back to standby interface.

2.3 Set gateway

E.g. Set gateway as 192.168.2.1

[012345] +  + [0] +  + [2] +  + [3] +  → ENTER GATEWAY:
000.000.000.000
LCD display

+ [192168002001] + 

The keypad will beep twice to confirm it has been changed, the keypad will return to previous setting. Press  +  +  back to standby interface.

2.4 Set subnet mask

E.g. Set subnet mask as 255.255.255.0

[012345] + + [0] + + [2] + + [4] + → ENTER SUBNET MASK:
000.000.000.000
LCD display

+ [255255255000] +

The keypad will beep twice to confirm it has been changed, the keypad will return to previous setting. Press + + back to standby interface.

2.5 Set DNS

E.g. Set DNS as 202.96.128.85

[012345] + + [0] + + [2] + + [5] + → ENTER DNS SERVER:
000.000.000.000
LCD display

+ [202096128085] +

The keypad will beep twice to confirm it has been changed, the keypad will return to previous setting. Press + + + back to standby interface.

3. Set CMS

CMS means central monitoring service, which is usually provided by security company with extra service cost.

[012345] + + [0] + + [3] + →

- 1] PHONE ALA CENTER
- 2] CMS PLATFORM
- 3] STA PLATFORM 1
- 4] STA PLATFORM 2

3.1 Phone ala center






[012345] + + [0] + + [3] + + →

- 1>SET CMS LINE 1
- 2>SET CMS LINE 2
- 3>SET ACCOUNT
- 4>ENTER DIAL TIMES

3.1.1 Set CMS line 1

When alarm is triggered, the central panel will dial CMS telephone No to inform the central monitor server. It can support to set 18 digits maximum.

E.g. Set Set CMS line as 800012345

[012345] +  + [0] +  + [3] +  +  + 

→  + [80012345] + 
LCD display






The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  +  back to stand by interface.

3.1.2 Set CMS line 2



Please refer to 3.1.1

3.1.3 Set account

CMS platform can control many device at the same time. User no. Means the no. of this device in CMS platform .E.g. Set user no as 0001






[012345] +  + [0] +  + [3] +  +  + [3] + 

 

→  + [0001] + 
LCD display


The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  +  back to stand by interface.

3.1.4 Enter dial times (01-10)

When alarm happens, the device will dial the CMS telephone no.1 and no. 2 at the same time, the dial times in factory default is 5 times. if the call is still not answered after 5 times, it will stop to dial out.E.g. Set dial times as 8times.

[012345] +  + [0] +  + [3] +  +  + [4] + 

→  + [08] + 
LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  +  back to standby interface.






3.2 CMS platform

 

[012345] +  + [0] +  + [3] +  + [2] + 


-
- 1>SET SERVER IP
 - 2>SET SERVER PORT
 - 3>SET CMS ACCOUNT
 - 4>SET CMS PASSWORD

3.2.1 Set server IP

Set CMS IP as 014.152.090.065

[012345] +  + [0] +  + [3] +  + [2] +  + 






→  + [014152090065] + 
LCD display



The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  +  back to standby interface.




3.2.2 Set server port

Factory default port: 7974

E.g. Set server port as 6598






[012345] +  + [0] +  + [3] +  + [2] +  + [2] + 

→  + [06598] + 
LCD display





The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  +  back to standby interface.

3.2.3 Set CMS account

CMS register ID and password are provided by the CMS operator.
User can search the CMS register ID and password as below:

[012345] +  + [0] +  + [3] +  + [2] +  + [3] + 

LCD will show the CMS register ID and password.




Press  +  +  +  back to standby interface.

The query CMS password is the same as the registration ID.

3.3 SIA platform

For the setting of SIA platform, please refer to the setting method of CMS .

4.Set voice phone



[012345] +  + [0] +  + [4] + 

- 1]VOICE PHONE 1
- 2]VOICE PHONE 2
- 3]VOICE PHONE 3
- 4]VOICE PHONE 4
- 5]PHONE DIAL TIMES




4.1 Voice phone

When alarm happens, the device will dial to user's phone no. Automatically. It can set 4 phone no maximum, each phone no. supports 18 digits maximum. E.g. Set voice phone no.2 as 88776655

[012345] +  + [0] +  + [4] +  + [2] + 

→  + [88776655] + 

LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting.Press  +  +  back to standby interface.

4.2 Phone dial times




Factory default: 5 times

E.g. Set dial times as 6




[012345] +  + [0] +  + [4] +  + [5] + 

→  + [06] + 

LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  back to standby interface.

5. Set sys options

 

[012345] +  + [0] +  + [5] + 

- 1] SYSTEM TIME
→ 2] ENTER DELAY
→ 3] EXIT DELAY
→ 4] BELL TIME
→ 5] FORCE ARM
→ 6] EMERGENCY TONE
→ 7] AC OFF DELAY
→ 8] DOOR SENSOR CHECK
→ 9] WLS SENSOR LOSS
→ 10] VOICE PROMPT


5.1 System time

E.g. Set system time as Oct, 1st, 2017 23:59:59

[012345] +  + [0] +  + [5] +  + 

→  + [17 10 01 23 59 59] + 
Y M D H Min S

LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  back to standby interface.

5.2 Enter delay

When alarm happens from delay zone, the device will delay to alarm for 15s in factory default. E.g. Set enter delay time as 20s.

[012345] + + [0] + + [5] + + [2] +

→ ENTER DELAY: 015
(000--255)S + [020] +

LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.3 Exit delay

Factory default time: 30s

It means, when user arms the system, it can not be valid at once, but only after 30s, the system will enter into arm status. The delay time can leave the user enough time to leave the house without triggering the system. E.g. Set exit delay time as 20s

[012345] + + [0] + + [5] + + [3] +

→ EXIT DELAY: 030
(000--255)S + [020] +

LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.4 Bell time

Factory default: 120s(2min) .E.g. Set bell time as 600s(10min)

[012345] + + [0] + + [5] + + [4] +

→ ALARM BELL TIME: 120
(000--999)S + [600] +

LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.5 Force arm

Factory default: enable

When there is zone fault, user will be not able to arm the device. But if set force arm, it is OK to arm, at the same time, the zone in fault will be bypassed with SMS or CMS report. E.g. Enable force arm

[012345] + + [0] + + [5] + + [5] +

→ + [1] +
LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.6 Emergency tone

Factory default: mute

E.g. Set emergency alarm tone as ring

[012345] + + [0] + + [5] + + [6] +

→ + [2] +
LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.7 AC off delay

Factory default: 15min

It means the time when AC off, the device will delay 15min to report to CMS about AC off. E.g. Set AC off report delay time as 5min

[012345] + + [0] + + [5] + + [7] +

→ + [005] +
LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.8 Door sensor check

When the door sensor is open, the panel will display zone trouble(default value is disable), example: set door sensor check to be enable.

[012345] + + [0] + + [5] + + [8] +

→ + [2] +
LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

5.9 WLS sensor loss: default value is 00 disable

Example: set detector loss check time is every 4 hours

[012345] + + [0] + + [5] + + [9] +

→ + [04] +
LCD display

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press + + back to standby interface.

Note: wireless detector send status report is every 3 hours, if the panel do not receive the report or alarming information, the detector will be regarded as loss. Recommended sensor loss check time is every 4 hours or above.

5.10 Voice prompt

The host arm and disarm, alarm and other voice prompts

For example: set to open local voice prompts

[012345] + + [0] + + [5] + + [0] +

→ + [2] +
LCD display

The keyboard beeps twice, indicating that the local voice prompt is successfully turned on. After setting, the keyboard will automatically return to the previous interface. Press + + back to standby interface.

6. Set wireless




6.1 Set remote



6.1.1 Enroll remote


Example: enroll remote to the #2 remote in alarm panel

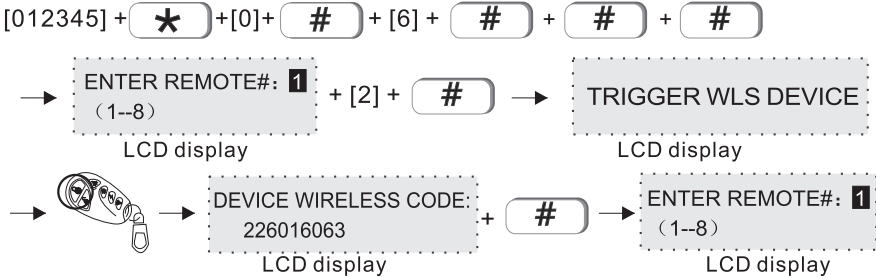

The keypad will beep twice to confirm it has been set, the keypad will return to previous setting. Press  +  +  +  back to standby interface.

6.1.2 Enter remote code


Example: manually enter the address code of remote 226016063 to be #3 remote in alarm panel

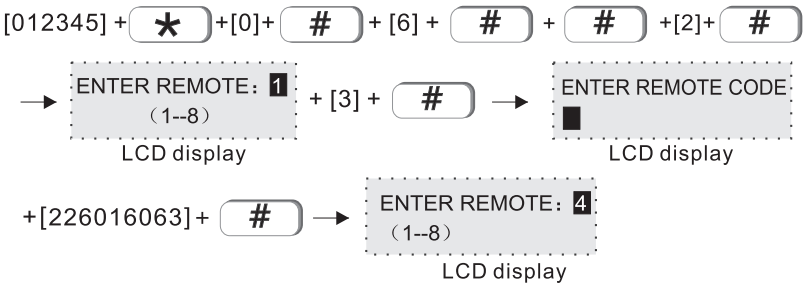

The keyboard beeps twice, indicating success. After the addition is completed, the keyboard will automatically enter the next remote adding.
Press + + + back to standby interface.

6.1.3 Delete remote


Example: delete #3 remote

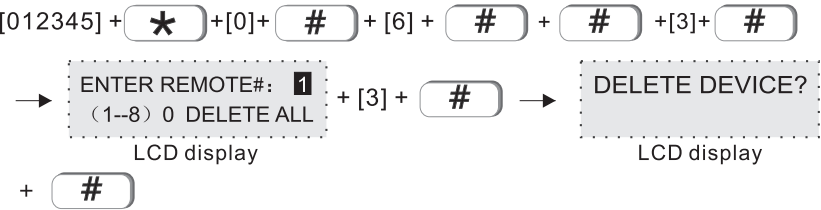

The keyboard beeps twice to indicate success. After the deleting is completed, the keyboard will automatically return to the wireless device management interface. Press + + + back to standby interface.


Note: enter 0 to delete all remotes

 6.2 Set WLS detector



6.2.1 Enroll detector

Example: enroll detector to #2 detector in the alarm panel.

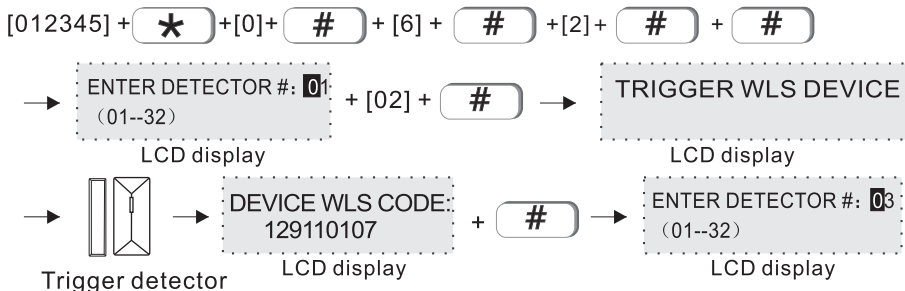


The keyboard beeps twice, indicating success. After the addition is completed, the keyboard will automatically enter the next detector adding.

Press + + + back to standby interface.

6.2.2 Detector code


Example: manually enter the address code of detector 129110107 to be #3 detector in alarm panel.

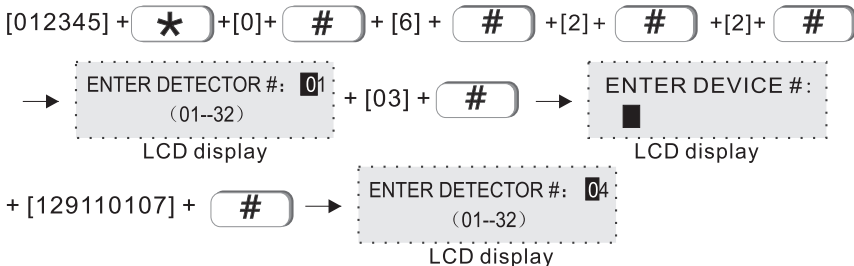

The keyboard beeps twice, indicating success. After the addition is completed, the keyboard will automatically enter the next detector adding.

Press + + + back to standby interface.

6.2.3 Delete detector

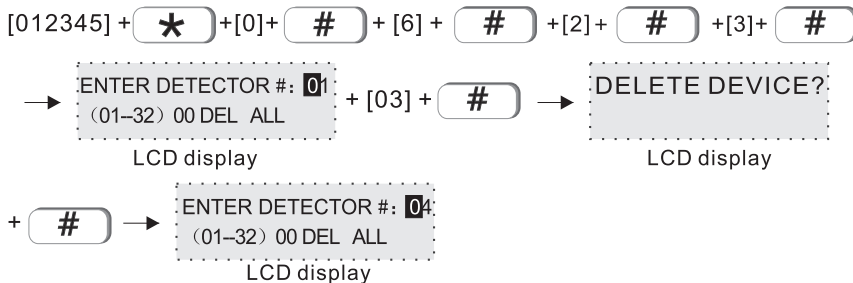

The keyboard beeps twice, indicating success. After the deleting is completed, the keyboard will automatically enter the next detector deleting.

Press + + + back to standby interface.

6.3 Set WLS siren




Note: When the wired siren is not connected, it will display fault. If you don't want to connect wired siren, pls connect a 2.2k resistor to the wired siren port.

6.3.1 Enroll siren

Example: enroll siren to #2 siren in the alarm panel

[012345] + + [0] + + [6] + + [3] + +

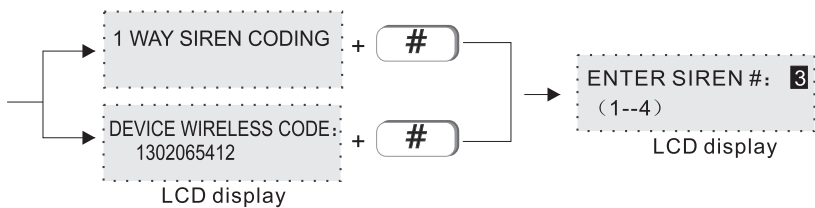


The keyboard beeps twice, indicating success. After the addition is completed, the keyboard will automatically enter the next siren adding.

Press + + + back to standby interface.

6.3.2 Delete siren

Example: delete #3 siren

 
[012345] + + [0] + + [6] + + [3] + + [2] +



The keyboard beeps twice, indicating success. After the deleting is completed, the keyboard will automatically enter the next siren deleting.


Press + + + back to standby interface.

 6.4 RF switch



6.4.1 Enroll switch

Example: auto the wireless switch to the # 2 switch in alarm panel.

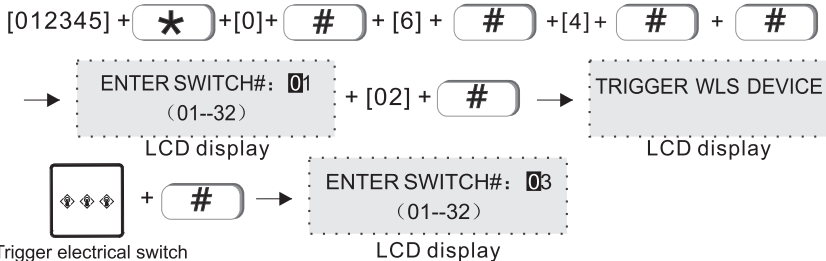


The keyboard beeps twice, indicating success. After the addition is completed, the keyboard will automatically enter the next switch adding.

Press + + + back to standby interface.

6.4.2 Enter switch code

Example: add a wireless switch code of 122095110 to No. 3 in alarm panel.

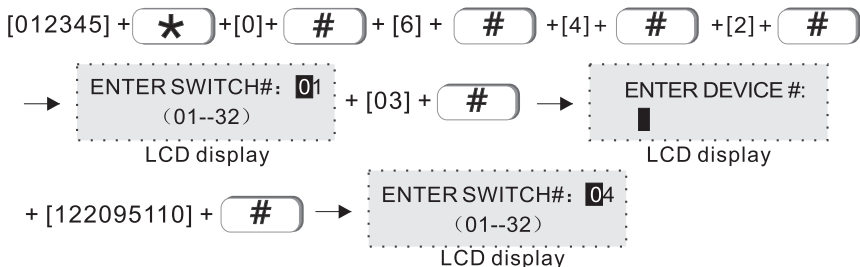


The keyboard beeps twice, indicating success. After the addition is completed, the keyboard will automatically enter the next switch adding.

Press + + + back to standby interface.

6.4.3 Delete switch

Example: delete the #3 switch.

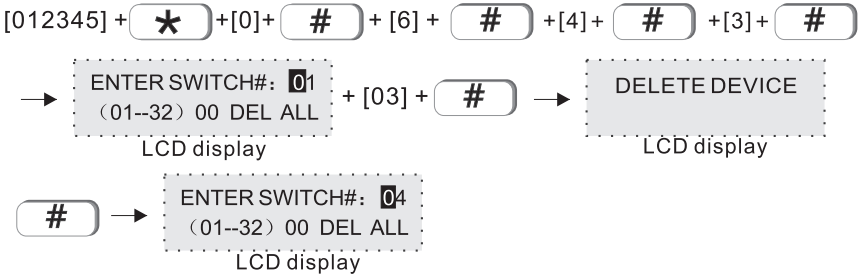


The keyboard beeps twice, indicating success. After the deleting is completed, the keyboard will automatically enter the next switch deleting.
Press ◀ + ◀ + ◀ + [#] back to standby interface.

7. Set system zone



A zone can be assigned to one or more areas. The zone assigned to a single area is determined by the status of the one area. The zone assigned to multiple areas is determined by the status of all the areas. As shown in the figure below, area 1 Armed, area 2 is disarmed, the common zone of area 1 and area 2 will not alarm if triggered

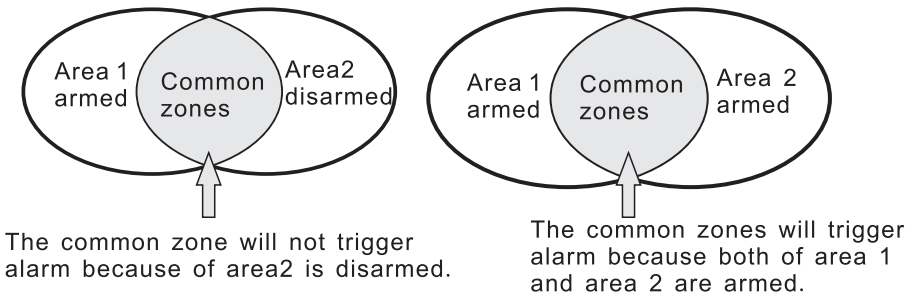

When the common zones set off alarm. All users in related area will receive notification.

but there is an exception. When one area is with arm delay setting. The other areas are armed, but the area which with arm delay time not finish yet. During this period, common zone triggered. Other zones will set off alarm, the area with delay setting will set off alarm until delay time is finished.

The zone supports naming. After the zone is named, the short message and keyboard will display the name.

7.1 Set zone type

The options of zone types as below


0>DISABLE	1>DELAY 1	2>DELAY 2	3>PERIMETER
4>INTERIOR	5>EMERGENCY	6>24H	7>FIRE
8>WATER SENSOR		9>Key zone	

1. The zone type refers to the alarm type displayed by the host after the detector set in the zone alarms. When the zone type is 0, the zone disable. Triggering the zone in any state will not cause the host to alarm.
2. The alarm will only be triggered when the internal zone is in the armed state.
3. When the delay and perimeter zone is in the state of home arm, it will alarm when triggered.
4. In any state of emergency, 24-hour, or fire protection zone, it will alarm when triggered.
5. The wireless zone does not support key zone type. When the wired zone is set as key zone, the host will disarm if the zone is triggered. Mainly used for access control systems.
6. The key zone is only applicable to 1~8 wired defense zones.

Factory default value:

Wireless zones 1-32 are enabled, wired zones 1-8 are disabled, 00 is the system zone, and 137-140 is the wireless siren zone.


Example: Set Zone 8 to be fire zone.

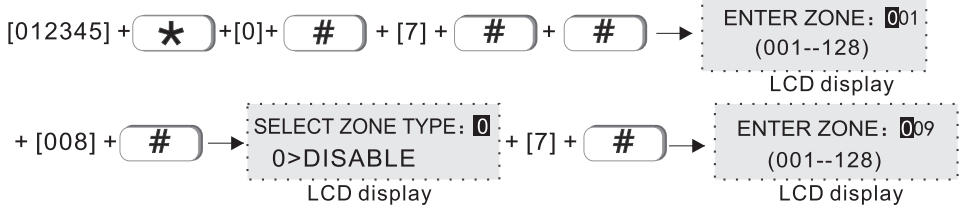

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next zone type setting.

Press + + + back to standby interface.

7.2 Set zone siren: default value to be cont(constant). Pul(pulse) and mute for option .Example: set zone 108 siren type to be pulse

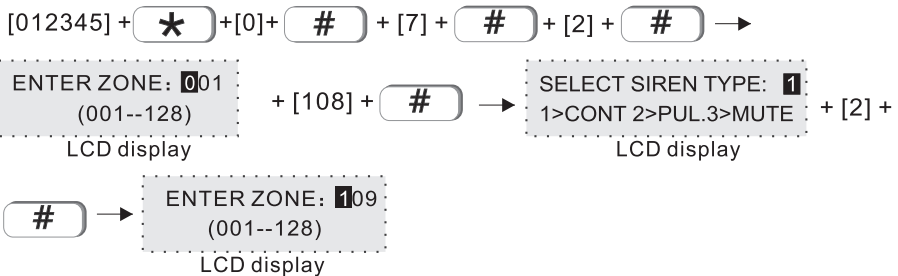


The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next siren type setting.

Press + + + back to standby interface.

7.3 Doorbell tone set. Default is disable

Example: set zone #12 doorbell type as enable.

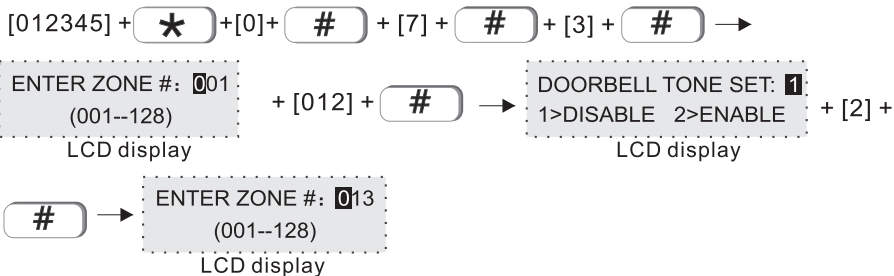


The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next doorbell type setting.

Press  +  +  +  back to standby interface.



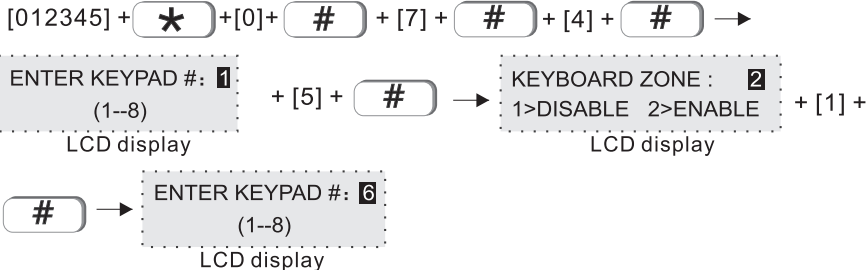

7.4 Keyboard zone. Enabled by default

Example: Close the keyboard zone #5.



The keyboard beeps twice, indicating that the keyboard zone is successfully set.

Then the keyboard will automatically enter the next keyboard zone setting.

Press  +  +  +  back to standby interface.

8. Set system area

[012345] + + [0] + + [8] + →

→ 1] PASSWORD AREA

→ 2] KEYPAD AREA

→ 3] REMTOE AREA

→ 4] ZONE AREA

→ 5] VOICE PHONE AREA


→ 6] SLECT PARTITION

Total 4 areas, the zones can be assigned to one or more areas. If the zones are assigned to more areas, the zones are common zones.

The common zones will not set off alarm if one of the assigned area is disarmed. The common zones will only set off alarm when all the assigned areas are armed.

The keypad, remote and voice number can be set to manage one or more areas.

Area 1 is master area, all event logs will report to area 1 only, user can enter system setting when area 1 is disarmed.

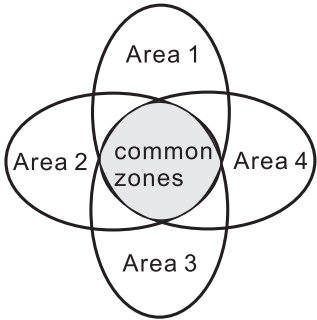

8.1 Password area(default value is area 1)

1 user password can manage 1~4 area, example: set password 1 to manage area 1 and area 3

[012345] + + [0] + + [8] + + →

ENTER PASSWORD#: 01
(01--32)

+

AREA: 1234 (*SEL)
MANAGE:: YNNN

LCD displayLCD display

+ + + +

ENTER PASSWORD#: 02
(01--32)

LCD display

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press + + + back to standby interface.

Note: Y--enable N--disable

8.2 Keypad area (default value is area 1)

The keypad only display the assigned area information. Example: set keypad 1 to manage area 2

[012345] + ***** + [0] + **#** + [8] + **#** + [2] + **#** →

ENTER KEYPAD #: **1**
(1--8)

LCD display

+ **#**

AREA: 1234 (*SEL)
MANAGE: **Y**NNN

LCD display

+ ***** + ***** + **#**

ENTER KEYPAD #: **2**
(1--8)

LCD display

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

8.3 Remote area (default value is area 1)

Example: set remote 1 to manage area 3.

[012345] + ***** + [0] + **#** + [8] + **#** + [3] + **#** →

ENTER REMOTE#: **1**
(1--8)

LCD display

+ **#**

AREA: 1234 (*SEL)
MANAGE: **Y**NNN

LCD display

+ *****

+ **▼** + ***** + **#**

ENTER REMOTE#: **1**
(1--8)

LCD display

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

8.4 Zone area

Area armed: all zones that assigned to this area are armed.

Area disarmed: all zones that assigned to this area are disarmed.

Default value: area 1. Example: assign zone 55 to be area 3.

[012345] + ***** + [0] + **#** + [8] + **#** + [4] + **#** →

ENTER ZONE: 001
(001--128)

LCD display

+ [055] + **#** →

AREA: 1234 (*SEL)
MANAGE: YNNN

LCD display

+ ***** + **▼** + ***** + **#** →

ENTER ZONE: 056
(001--128)

LCD display

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

8.5 Voice phone area (default value is area 1)

User can set 4 voice phone numbers, example: set voice phone #1 to manage area2 and area 3.

[012345] + ***** + [0] + **#** + [8] + **#** + [5] + **#** →

VOICE PHONE: 1
(1--4)

LCD display

+ **#** →

AREA: 1234 (*SEL)
MANAGE: YNNN

LCD display

+ ***** + ***** + ***** + **#** →

VOICE PHONE: 2
(1--4)

LCD display

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

8.6 Slect partition (default value is area 1)

You can set 4 time arm/disarm area.
Example: Set timing 2 to control area 2 and 4.

[012345] + [*] + [0] + [#] + [8] + [#] + [6] + [#] →

ENTER SERIAL NO.: 1 (1--4) LCD display + [2] + [#] → AREA: 1234 (*SEL) MANAGE: YNNN LCD display

+ [*] + [*] + [▼] + [*] + [#] → ENTER SERIAL NO.: 3 (1--4) LCD display

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press [◀] + [◀] + [◀] + [#] back to standby interface.

NOTE: Y is enable, N is disable.


9. Set others

[012345] + [*] + [0] + [#] + [9] + [#] →

- 1] WIRED ZONE
- 2] RELAY
- 3] SIM CARD SET
- 4] TIMING ARM/DISARM
- 5] SINGLE BUS DEVICE
- 6] KEYPAD FAULT DISP

9. 1 Wired zone

Set loop type of wired zone. Default is EOL type.
Exampel, set zone 3 loop type N. O

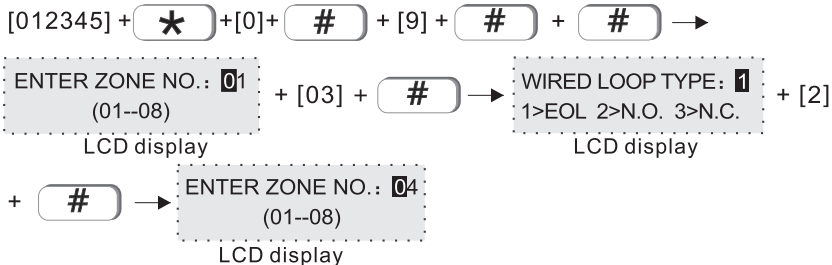


The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

9. 2 Relay

Set relay switch output type. Default is N. C

Example: Set relay # 15 with output type N. O

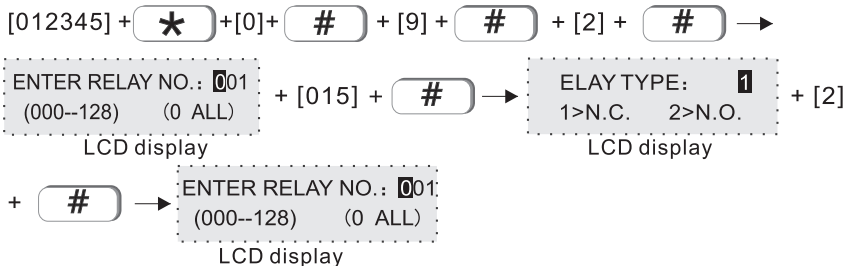

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically enter the next setting.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

9. 3 SIM card set









9. 3. 1 SIM card priority setting

The SIM card to be used first when enabling the SIM card network, making calls, sending text messages and other functions.

The default is SIM card 1 priority.


Example: set SIM card 2 priority.

[012345] +  + [0] +  + [9] +  + [3] +  +  →

SET DEFAULT SIM: 

1>SIM 1 2>SIM 2

LCD display






+ [2] + 

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically return to previous setting.

Press  +  +  +  back to standby interface.

9. 3. 2 SIM card 1 set

Example: Set SIM card 1 mode as close.

[012345] +  + [0] +  + [9] +  + [3] +  + [2] + 

→

SELECT SIM MODE: 

0>CLOSE 1>2G 2>4G 3>5G

LCD display

+ [0] + 

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically return to previous setting.

Press  +  +  +  back to standby interface.

9. 3. 3 SIM card 2 set

Pls refer to 9. 3. 2 SIM card1 setting

9.4 Timing arm/disarm

[012345] + + [0] + + [9] + + [4] +

→ 1>TIMING ARM/DIS.1
→ 2>TIMING ARM/DIS.2
→ 3>TIMING ARM/DIS.3
→ 4>TIMING ARM/DIS.4

Automatically carry out arming / disarming operations at a certain time set. You can set 4 groups of timing arm/ disarm operations can be set, and the default is off. Among them, Y is enabled and N is disabled.

For example: set the timing arm /disarm 1 as arming, the time is 15:32, and the period is Monday to Friday.

[012345] + + [0] + + [9] + + [4] + +

→

ARM/DISARM SET: 2
1>ARM 2>DIS 3>STAY

LCD display

 + [1] +

→

ENTER TIMING TIME:
00:00 (00:00 OFF)

LCD display

+ [1532] +

→

WEEK: 7123456(*SEL.)
SEL.: YYYYYY

LCD display

+ + +

+ + + + +

The keyboard beeps twice, indicating success. After the setting is completed, the keyboard will automatically return to previos setting.

Press + + + back to standby interface.

9. 5 Single bus device

[012345] + + [0] + + [9] + + [5] +

→ 1>DEVICE STATUS
→ 2>DEVICE INFO
→ 3>DEVICE OPTION
→ 4>DEVICE RESTART
→ 5>RESTORE TO FACT.

9. 5. 1 Device status: After entering the device number, click "#" to query the device status.

Device information query:

[012345] + + [0] + + [9] + + [5] + +



The keyboard beeps twice, indicating that the query is complete, press to enter a number query,

Press + + + + return to the standby interface.

9. 5. 2 Device info: You can check the hardware and software version of the device.

For example, check the version number of the infrared detector with the single-bus device number 3.

[012345] + + [0] + + [9] + + [5] + + [2] +









The keyboard beeps twice, indicating that the query is complete, press to enter a number query,






Press + + + + return to the standby interface.

9. 5. 3 Device option: Different device types have different options to enter. Users should refer to the device manual to set them.

Please refer to the following operations to enter the device option settings.






[012345] +  + [0] +  + [9] +  + [5] +  + [3] + 

→ ENTER SERIAL NO. : 
(01-32)
LCD display

Enter the serial number of the device and press # to enter the setting. The keyboard beeps twice, indicating that the setting is complete. Enter a setting item. Press  +  +  +  +  back to standby interface.



9. 5. 4 Device restart

For example: restart the device with serial No. 22.

[012345] +  + [0] +  + [9] +  + [5] +  + [4] + 

→ ENTER SERIAL NO. : 
(01-32)
LCD display

+ [22] +  → DEVICE:02 RESTART?
LCD display

+  → ENTER SERIAL NO. : 
(01-32)
LCD display


The keyboard beeps twice, indicating that the restart setting is successful. After the setting is completed, it will enter the next device serial number.

Press  +  +  +  +  back to standby interface.

9. 5. 5 Restore to fact

Restore the device to the factory default settings.


For example: reset the device with the serial number 13 to factory settings.

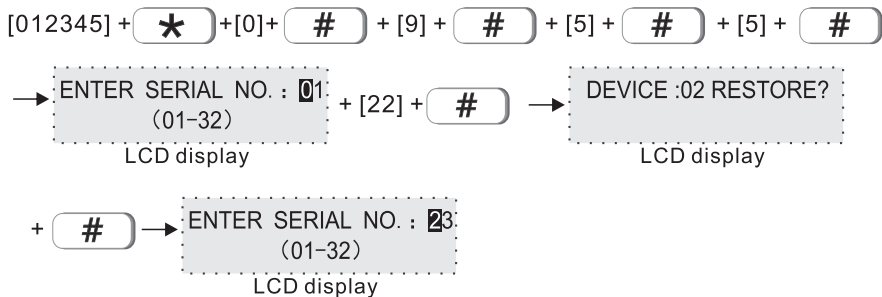

The keyboard beeps twice, indicating that the factory settings are restored successfully. Then enter the next device Serial number.


Press **◀** + **◀** + **◀** + **◀** + **#** back to standby interface.

9.6 Keypad fault disp

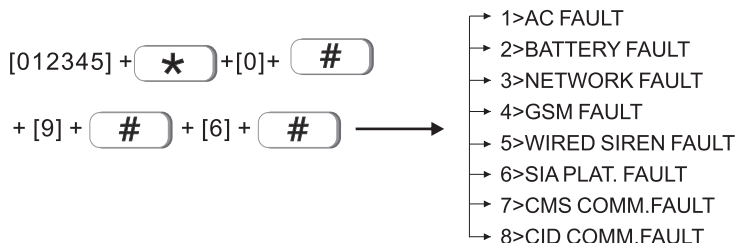

"ENABLE" the keyboard will display the fault, and "DISABLE" will not display it. (Enabled by default)

For example: Prohibition of wired siren failure.

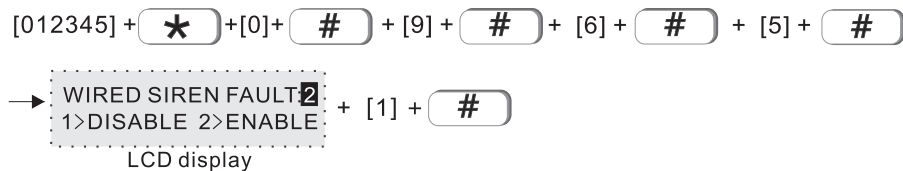

The keyboard beeps twice, indicating that the wired siren has been successfully set. Then the keyboard will automatically return to the previous interface.

Press **◀** + **◀** + **◀** + **#** back to standby interface.

10. Advanced set.

Without voice prompt, programme address and the corresponding options as below:

001--System Language	1	916--Detector_low_bat	13
002-- Ring Times	0~15	917--Detector_bat_ok	13
003--Communication Test Time	0~999S	918--Wireless_loss	13
005--Wireless Detector Tamper	2	919--System_programme	13
006--Arm/Disarm Siren Short Sound Tone	1	920--Arm_fail	13
007--Web Port	0~65535	921--Comm_test	13
008-- Limit of Alarming Times	1	922--Event_bypass	13
009--One-key Arm	1	923--Sys_bat_recovery	13
010--First Communication Detection		924--Sys_comm_fault	13
Time	0~23 S	925--Bypass_cancel	0
011--CMS Connection Mode	2	926--Comm_recovery	0
012--CMS Heartbeat Time	1~60S	927--Loop_fault	0
013--SIA Platform Connection Mode	1	928--Loop_recovery	0
014--Platform Heartbeat Time	1~9999S	929--Bell_fault	15
040--DTMF interval time	50-200mS	930--Bell_recovery	15
041--DTMF duration	50-200mS	931-- Event_duress	15
100--GSM Module Signal	0~32	932--Delay_recovery	0
200--Restore to Factory Default	1	933--Perimeter_recovery	0
900--Event_delay	15	934--Interior_recovery	0
901--Event_perimeter	15	935--Emergenc_recovery	0
902--Event_interior	15	936--Hour24_recovery	0
903--Event_emergency	15	937--Fire_recovery	0
904--Event_24hour	15	938--SOS_recovery	0
905--Event_fire	15	939--Tamper_recovery	0
906--Event_water	15	940--Wls_loss_recovery	0
907--Event_panic	15	941 --Pstn_fault	13
908--Event_tamper	15	942 --Pstn_recovery	13
909--Event_arm	13	943 --Module Removed	13
910--Event_disarm	13	944--Water_recovery	13
911--Event_home	13	945--Password Error	13
912--System_low_bat	13	946--Program Entry	13
913--System_ac_fault	13	947--Program Exit	0
914--System_ac_ok	13	948--Bat_loss	13
915--Alarm_cancel	13	949--Bat_loss_recovery	13
		950--Bat_fault	13
		951--Bat_fault_recovery	13


2. #900-948 Alarm Event, the value above is factory default.

On-screen instructions



Programming address	Data
---------------------	------

 Press the up and down keys to view and modify the data of different data bits.
For example: set Ring Times to 5.



The keyboard beeps twice, indicating that the setting is successful. Then the keyboard will automatically return to the previous interface.

press  +  +  back to standby interface.

II. Web IE introduction

Enter the System setting of host, set the IP address and gateway in the network settings.

1. Access to the host

Users can use the web administrator account, primary user account and general user account to log in the web page. Different account types have different permissions. Web administrator account has the highest permissions, while primary user account has partial permissions. General user account can only set permissions for arm and disarm. 32 general user accounts can be set by web administrator or primary user.

Method 1: Open Google Chrome and enter the 12-digit IP address of the host in the address bar and press Enter to confirm;

Method 2: Enter `http://meian_panel` to log in.

Enter the user name and password in the pop-up dialog box and click OK.


Both the user name and password are the factory default settings. If there is any change, please refer to the change.

Web administrator account: admin ; Password: admin;

Master user account: need to input the value you set , Password: 1234;

General user account: need to input user account you set , Password: 1234

The browser opens as shown in the figure below. The web page settings include Basic Management, Network Settings, System Options, and System Maintenance.

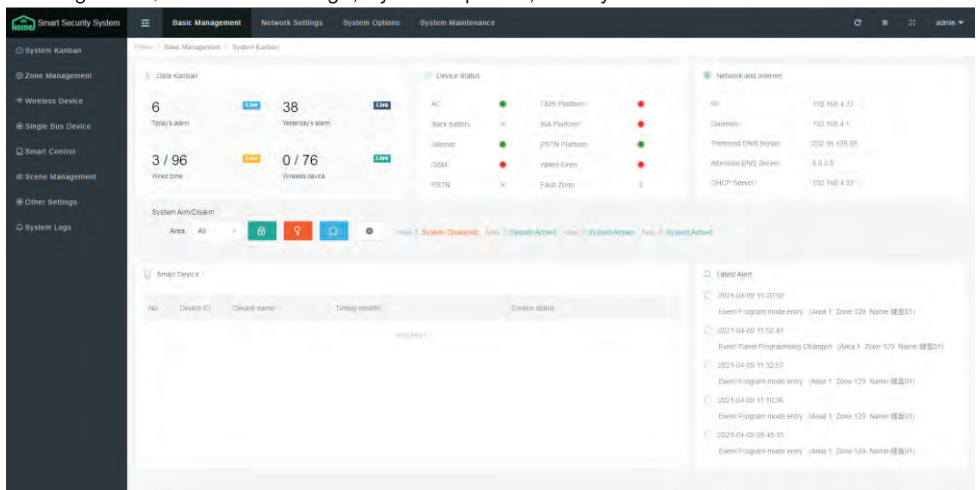

2. Basic management

2.1 System Kanban

System Kanban can view real-time data of Device Status, Network and Internet, System Arm/Disarm, Smart Device, Latest Alert, etc.

Data Kanban: Display the real-time data of Today's alarm, Yesterday's alarm , Wired zone, and Wireless device.

Device Status: the connection status of AC , Platform, Back battery, etc. The green circle means connected, the red circle means fault, and "X" is the unsupported item of the device.

Data Kanban

6

Today's alarm

Live

38

Yesterday's alarm

Live

3 / 96

Wired zone

Live

0 / 76

Wireless device

Live

Device Status

AC	<div></div>	CMS Platform	<div></div>
Back battery	X	SIA Platform	<div></div>
Internet	<div></div>	PSTN Platform	<div></div>
GSM	<div></div>	Wired Siren	<div></div>
PSTN	X	Fault Zone	3

Network and Internet: Current Network IP address and Gateway information.

Network and Internet	
IP	192.168.4.33
Gateway	192.168.4.1
Preferred DNS Server	202.96.128.86
Alternate DNS Server	8.8.8.8
DHCP Server	192.168.4.33

System Arm/ Disarm: Select the Area and click the Arm/ Disarm icon to arm /disarm the area.

System Arm

System Disarm

System Stay

Cancel Alarm

System Arm/Disarm

Area

All

Area 1 System DisarmedArea 2 System ArmedArea 3 System ArmedArea 4 System Armed

2. 2 System management

The added zones can be set here: 1-8 are wired zones, 9-40 are wireless zones, 41-96 are extended zones, 97-128 are single-bus zones. Red“ ● ”means fault, and green “ ● ”means the fault is already cleared.

Bypass: Refers to temporarily failing the zone when Arm, so that it can cancel the alert state. After the zone is disarmed, the zone will be restored to the normal zone. When the zone fails, in order not to affect the use of the system, the zone can be set as a bypass zone.

Zone Settings

Zone code	Zone name	Zone type	Area	Siren	Chime	Zone alarm	Tamper Al.	Loop fault	Battery fault	Lost fault	Operation
1	Unnamed	Delay zone 1	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
2	Unnamed	Delay zone 1	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
3	Unnamed	Unused	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
4	Unnamed	Unused	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
5	Unnamed	Unused	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
6	Unnamed	Unused	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
7	Unnamed	Unused	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
8	Unnamed	Unused	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
9	Unnamed	Delay zone 1	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
10	Unnamed	Delay zone 1	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
11	Unnamed	Interior zone	1 2 3 4	Continuous tone	ON	●	●	●	●	●	
12	Unnamed	Interior zone	1 2 3 4	Continuous tone	ON	●	●	●	●	●	

128 in total

1 2 3 4 5 ... 11

Next

12 Article / Page

Skip

1

Page

Confirm

Click the icon “” to make settings.

Zone code: The zone number of the device, and the wired zone number corresponds to the terminal number of the wired zone of the host;

Zone name: Please set by yourself;

Zone type: Please refer to "7.1 Zone Attribution Setting" on page 30;

Area: A zone can be assigned to one or more areas. For the relationship between zones and areas, please refer to manual "7. System Zone Settings";

Siren : Mute, Continuous tone, and Pulse tone can be selected.

Chime: When the alarm is triggered, the host will emit two “dingdong” sounds; After setting, click "Save" to take effect, and click "Close" to not save.

Modify zone info

Zone code 1

Zone name

Zone type Delay zone 1

Area Area1 Area2 Area3 Area4

Siren Continuous tone



Chime OFF

Save Close



2.3 Wireless device

Auto search: Click “Auto search” to trigger the wireless device to automatically check the code. Note that the trigger of the wireless device must be within 30 meters from the host;

Auto search		Add manually							
No.	Device type	Wireless code	Device name	Area	Operation				
1	Detector	020096244	Door	1 2 3 4	 				
1	Step: 1 / Page:	Confirm	1 in total	15 Article / Page					

Add manually: Manually enter the 9-digit address code of the wireless device to add.As shown in the figure, the device type includes Remote, Detector, Electrical switch, and Siren.Set the Device number and Device name when adding, and check the area and enter the 9-digit wireless address code at the bottom of the device. For example, if you want to add Electrical switch, please select the corresponding channels. After setting, click “Save” to take effect. Click this icon



” to modify the device, click this icon ”



Filter column Export Print

Filter column: Display of chart items, which can display Device type, Wireless code, Device name, Area, Operation, and it will not be displayed if it is unchecked.

Export: Export the added device information to Excel format.

Print: Print out the added device information on paper.

Add manually device

Device type

Remote

Device number

1

Device name

Please enter device name

Area

Area 1

✓

Area 2

Area 3

Area 4

Wireless code

Please enter 9-digit ID

Save

Close

2. 4 Single bus device

Please refer to the manual to set the connected single-bus device. Restart and Restore to factory settings need to enter the administrator password (The default is 012345).

Single bus device list						
Device number	Device type	Zone name	Device State	Hardware version	Firmware version	Operation
1	Device not connected	detector				
2	Dual tech Infrared & MW	Unnamed	Normal	V1.01	V0.01	Settings Restart Reset
3	Device not connected	Unnamed				
4	Device not connected	Unnamed				
5	Device not connected	Unnamed				
6	Device not connected	Unnamed				
7	Device not connected	Unnamed				
8	Device not connected	Unnamed				
9	Device not connected	Unnamed				
10	Device not connected	Unnamed				
11	Device not connected	Unnamed				
12	Device not connected	Unnamed				

2. 5 Smart control

Smart control means remote control and setting of wireless switch name and timing automatic switch. The device name can be modified in "Wireless Device". Other setting items can be directly clicked to modify or check, multiple loops can be timed, and the operation of the device is the operation (open or closed) performed during the time period.

No.	Device ID	Device name	Timing enable	Timing on	Timing off	Timing correlation loop	Operation
1	16000000	Switch	<input checked="" type="checkbox"/>	00:00	00:00	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	<input type="radio"/> OFF <input checked="" type="radio"/> ON <input type="radio"/> OFF

2. 6 Scene management

Scene management includes Zone linkage, Relay linkage, Electrical switch linkage, and PGM linkage.

Zone linkage: Set up two associated zones, and the alarm will only be triggered when two zones are triggered within the effective time.

Mode 1: No sequence. Alarm will be triggered within the setting time, when two zones are triggered at the same time.

Mode 2: There is a sequence. Only when Zone 2 is triggered first, then Zone 1 is triggered within the setting time range, the alarm will be triggered. and it will not alarm if Zone 1 is triggered first , then zone 2 is triggered;

Mode 3: There are sequence and direction. Trigger Zone 2 and then trigger Zone 1, it will make alarm. Trigger Zone 1, and then trigger Zone 2 , the alarm is not triggered, and return to no alarm within the setting time range . For example: Zone 1 → Zone 2 → Zone 2 → Zone 1.

Scene management						
<div> Zone linkage Relay linkage Electrical switch linkage PGM linkage </div>						
<div> Add zone linkage <div> <div></div> <div></div> <div></div> </div> </div>						
No.	Enable/Disable	Associated zone 1	Associated zone 2	Mode	Effective time	Operation
1	Enable	1	2	1	1	<div> <div></div> <div></div> </div>
<div> 1 Skip 1 Page Confirm 1 in total 10 Article / Page </div>						

Relay linkage: The Type of alert you set is triggered within the effective time, and the relay in the alarm area performs an output or recovery action.

Click "Add relay linkage" to enter the interface on the right. The Event type can be divided into Area event, Zone event, and System event. Different Event type can choose different Type of alert. The Area number is the alert trigger area. Up to 8 relay numbers can be linked. Click "Save" after setting.

Add relay linkage scene

Enable/Disable
ON

Event type
Area event

Type of alert
You can only choose 8 at most

Area number
Area 1

Relay number
You can only choose 8 at most

Action
☒ Output
☐ Recovery

Effective time
Please enter the effective time (0-999 seconds)

Save
Close

Electrical switch linkage/ PGM linkage: Triggering the setting alert within the effective time will execute the action of turning on or off of the electrical switch/PGM.

Add electrical switch linkage scene

Enable/Disable

ON

Event type

Area event

Type of alert

You can only choose 8 at most

Area number

Area 1

Switch number

1

Associated loop

You can only choose 8 at most

Associated loop

☒ OFF ☐ ON

Effective time

Please enter the effective time (0-999 seconds)

Save

Close

2.7 Other settings

2.7.1 Wired zone settings

Wired zone loop type: EOL, N.O., N.C..And the default is EOL.

EOL: When the resistance at the end of the line in the zone is 2.2K, it is normal, and the zone will alarm if it is open circuit or short circuit;

N.O.: the open circuit in the zone is normal, and it alarms when it is under the short circuit;

N.C.: the short circuit in the zone is normal, and it alarms when it is under the open circuit.

After the setting is completed, click “Save” to take effect.

Wired zone settings

Zone number

Please select

Loop type

☐ EOL ☐ N.O. ☐ N.C.

Save

2.7.2 Bypass group setting

A bypass group can select up to 16 defense zones, and up to 8 bypass groups can be set. Click the drop-down window "▼" to select.

Bypass group setting

Bypass group number

Please select ▼

Zone number

You can only choose 16 at most

Save

2.7.3 Relay settings

Relay circuit type: N. C. / N. O. mode can be selected, and the default mode is N. C.

Relay settings

Relay number

Please select ▼

Set all N.O.

Set all N.C.

Loop type

☐ N.O.

☐ N.C.

Save

2.7.4 Keyboard area settings

Assign the keyboard to one or more areas, then select the keyboard number. The keyboard name can be modified. Check the area, and click “Save” to take effect.

Keyboard area settings

Keyboard number

Please select ▼

Keyboard name

Enable/Disable Zone

☒ OFF

(Keyboard expansion zone)

Area

☐ Area 1

☐ Area 2

☐ Area 3

☐ Area 4

Save

2.7.5 Keyboard fault display

When the network cable or phone card is not inserted or not inserted properly, the keyboard display screen shows the Network fault, and the fault can be removed by inserting the network cable or phone card properly. And you can also disable this fault in this setting, and the keyboard display will not display the fault. All display is turned on by default, and the user must click Save after completing the settings.

Keyboard fault display

System AC fault ☒

System battery fault ☒

Network fault ☒

GSM fault ☒

Wired siren fault ☒

SIA platform connection fault ☒

CMS platform connection fault ☐

CID communication fault ☒

Save

2.8 System log

The system log can query the system event records of the partition/zone/user, and can store up to 800 event records in a loop. Wireless remote control defense

System log

Clear all logs

No.	Area code	Zone code	Zone name	Alarm event	Alarm time
1	4	155	CMS/APP	Disarm	2021-04-09 16:25:25
2	3	155	CMS/APP	Disarm	2021-04-09 16:25:25
3	2	155	CMS/APP	Disarm	2021-04-09 16:25:25
4	1	155	CMS/APP	Alarm Cancel	2021-04-09 16:25:25
5	1	9	Door	Tamper	2021-04-09 16:25:19
6	1	129	Keyboard 01	Program mode entry	2021-04-09 15:20:50
7	1	129	Keyboard 01	Panel Programming Changed	2021-04-09 11:52:49
8	1	129	Keyboard 01	Program mode entry	2021-04-09 11:32:57
9	1	129	Keyboard 01	Program mode entry	2021-04-09 11:10:36
10	1	129	Keyboard 01	Program mode entry	2021-04-09 09:45:35
11	1	129	Keyboard 01	Program mode entry	2021-04-09 09:06:12
12	1	129	Keyboard 01	Panel Programming Changed	2021-04-08 17:37:39

242 in total

1

2

3

4

5

...

21

Next

12 Article / Page

Skip

1

Page

Confirm

area code: 141-148; main user keyboard defense area code: 170; common user keyboard defense area code: 171-202.

Defense zone code composition: 1-8 are wired defense areas, 9-40 are wireless defense areas, 41-96 are extended defense areas, 97-128 are single-bus defense areas, 129-136 are keyboard defense areas (keyboard emergency alarm or disassembly alarm), 137 - 140 is the wireless siren defense zone (demolition alarm).

User operation number: 170 is the main user password, 171-202 is the user password 1-32, and 141-148 is 1-8 wireless remote control or wireless keyboard defense zones (emergency alarm, etc.).

3. Network settings

3. 1 TCP/IP settings

You can set the host name, IP address, subnet mask, default gateway and other information. The MAC address cannot be changed. If the DHCP function is enabled, the above information changes are invalid, and the host IP address is displayed in the automatically assigned IP address column.

TCP/IP Settings

Host name

meian_panel

IP address

192.168.4.33

Subnet mask

255.255.255.0

Default gateway

192.168.4.1

Preferred DNS

202.96.128.86

Standby DNS

8.8.8.8

MAC address

00:00:D9:EB:3E:9A

DHCP

☐ OFF

IP address auto-configuration

192.168.4.33

Web port

80

Save Settings

Reset

3. 2 GPRS settings

This setting is for the host to use GPRS to access the network, and the default SIM card network will be used first. When the default SIM card fails, the backup SIM card network will be enabled. SIM card 1 is limited to 2G network, and SIM card 2 supports 4G network. This device does not support 5G currently. APN, APN user and APN Password are provided by the operator. Please click "Save" after setting.

SIM card management

Default SIM card ☒ Card 1 ☐ Card 2

Save

SIM 1 Settings

Mode

2G

APN

cmnet

APN user

APN PWD

Dial codes

*99***1#

*If you don't understand this setting, please consult your SIM card supplier

Save Settings

Reset

SIM2 Settings

Mode

Unused

APN

APN user

APN PWD

Dial codes

*99#

*If you don't understand this setting, please consult your SIM card supplier

Save Settings

Reset

3. 3 Email settings

a. SMTP server: fill in the SMTP server address that you want to send mail correctly, if you use 163 mailbox, the SMTP server address is: smtp.163.com

b. SMTP port: The default is 25 (SSL encryption port is not supported temporarily)

c. Mailbox login password: the password or authorization code of the sending mailbox, please fill in according to the actual situation.

d. The sending mailbox needs to log in and enter the mailbox settings, and enable the SMTP mail. If it is not turned on, the mail cannot be sent.

Email Settings

Enable/Disable

☐ OFF

SMTP server

SMTP server port

0

Email login username

Email login password

Sender's email address

Recipient's email address

Save Settings

Reset

3. 4 CMS platform

The IP of the alarm platform/registered platform can be set under this setting item, and the alarm information can be uploaded to the platform after it is turned on. If you choose to set manually, you need to apply for a registration ID before you can upload information.

Authentication : After checking, automatically obtain the server address, port number, ID and other information and connect to the platform. Turn it on, click "Save Settings" and restart the device to go online on the CMS platform.

Turning on and off the platform will restart the device.

If you need to fill in manually, please turn off authentication first.



Alarm platform server and port: Fill in according to the server.

Heartbeat time: Refers to the time interval for the device to send a heartbeat message to the platform the last time it was sent. At every heartbeat interval, the device will send heartbeat information to the platform. After receiving the heartbeat information, the platform will record the time of receiving the heartbeat. If the heartbeat information of the device is not received for three consecutive heartbeat intervals, it is considered that the device is offline, and the offline time is recorded in the platform data.

CMS Platform Settings

Authentication

ON

Alarm platform server

Alarm platform server port

0

Platform user ID

Platform user password

Heartbeat time

10

Save Settings

Reset

3. 5 SIA platform


The alarm platform mode can be set to single-platform connection mode or dual-platform connection mode.

In Single platform connection mode, if the Main alarm platform is disconnected and reconnected more than 5 times, the host will start the Backup alarm platform connection. At this time, the Main alarm platform is still trying to connect. When the Main alarm platform is restored, the Backup alarm platform will actively disconnect. When the voice platform of the Main alarm platform is successfully sent, it will not be sent to the Backup alarm platform again.

In Dual platform connection mode, the host will connect to two platforms at the same time, and the alarm information will be sent to both platforms at the same time. When the network is abnormal, the host will start GPRS, and when the GPRS

is abnormal, the host will start GSM to send data.

After the setting is completed, click “Save Settings” to take effect after restarting.

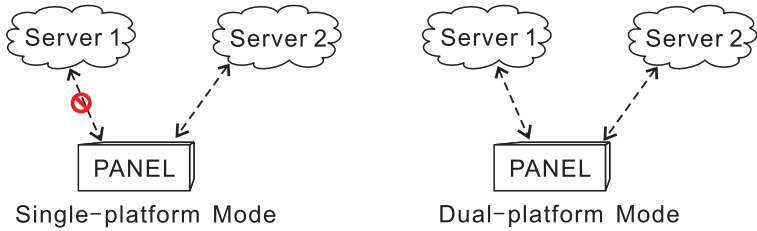

SIAAlarm Platform Settings

Enable/Disable

ON

Main alarm platform server

Main alarm platform server port

7974

Main platform user ID

Main platform user password

Backup alarm platform server

Backup alarm platform server port

7974

Backup platform user ID

Backup platform user password

Heartbeat time

45

Heartbeat time

Single platform connection mode

Dual platform connection mode

Save Settings

Reset

3.6 PSTN alarm platform settings (Ademco Contact ID protocol)

When setting the alarm call, enter “P” in the phone number, and the dialing will pause for 1 second.

The number of dialing is 5 times by default. When the alarm is triggered, the host will make a call to the alarm receiving platform. When the phone number 1 is not connected, the host will automatically dial the phone number 2, and make a circular call within the number of dialing set by the user.

The number of users can be 0 to 9, B, C, D, e and F. the interval of communication detection is to set a period of time, and the host will automatically communicate with the alarm center to detect whether the communication is normal.

PSTN Alarm Platform Settings

Enable/Disable
☒ ON

CMS phone number 1

CMS phone number 2

User No.
 0000

Dialing times
 5
(1-15 times)

Save Settings
Reset

4. System options

4.1 Alarm Parameter Settings

1> Entry delay time: it is only effective for the delay zone, and there is no entry delay for other types of zones. It is convenient for users to disarm the host before the host alarm takes effect, and the alarm information will not be uploaded to the alarm center.

2> Exit delay time: after user arm the host, it is convenient for user to leave before the host is armed.

3> Siren duration: the ringing time of siren after the host alarm (default:5 minutes).

4> Detector loss detection time: within this time period, the host inspects if receive any status report or alarm from the detector. If not, the host will show this

detector lost.

5> AC power detection time: After AC power failure, it is the time that the host delay to upload report information to the alarm center (default is 30 minutes).

6> Communication detection interval: set a period of time, the host will automatically communicate with the alarm center once to detect whether the communication is normal (default is 0).

Alarm Parameter Settings

Entry delay 1	<input type="text" value="30"/>	(0~255 seconds)
Entry delay 2	<input type="text" value="45"/>	(0~255 seconds)
Exit delay	<input type="text" value="10"/>	(0~255 seconds)
Siren duration	<input type="text" value="5"/>	(0~30 minutes)
Detector loss detection time	<input type="text" value="0"/>	(0-99 hours), set 0 to close the wireless loss detection function
AC power detection time	<input type="text" value="30"/>	(0-99 minutes)
Communication detection interval	<input type="text" value="0"/>	(0-999 hours), 0 does not send detection report

7>Arm/disarm tone: when the user arm/disarm the host with the remote control, the siren will sound for a short time (the default is disable).

8> Alarm limit: the number of times that the host alarms several times continuously and the alarm information is uploaded to the alarm receiving center. When the alarm number reaches the limit in the arm status, the alarm triggered will be ignored.

9> Door sensor detection: if enable, when the magnetic strip is open, it will show the zone fault (default is disable).

10> Detector disassembly detection: when the detector is removed, the host will alarm. (the default is enable).

11> Force arm: when enable force arm, system still can be force armed when zone are in trouble and trouble zones will be bypassed automatically and system will send bypass report to user and alarm receiving center. When disable force arm, system can not be armed when zones are in trouble. (factory default: disable)

12> Quick arm: if enable, user can arm the system via keypad without entering password. If disable, user need to enter password to arm via keypad. Click save

after setting.

13> Local voice prompt: arm/disarm/alarm voice prompt and so on in host. (factory default: enable)

14> Emergency alarm tone: when alarm, the host is mute or ring. (factory default: mute)

15> Host disassembly detection: when the host is removed, the alarm will be triggered. If disable, it will not give alarm.

Arming alert tone <input checked="" type="checkbox"/>	Alarm limit <input type="checkbox"/>
Door sensor detection <input type="checkbox"/>	Detector disassembly detection <input checked="" type="checkbox"/>
Force arming <input type="checkbox"/>	Quick Arm <input type="checkbox"/>
Local voice prompt <input type="checkbox"/>	Emergency alarm tone <input type="checkbox"/>
Host disassembly detection <input checked="" type="checkbox"/>	
<input type="button" value="Save Settings"/> <input type="button" value="Reset"/>	


4.2 Alert settings

When the alarm is triggered, the system will upload to the alarm platform, make voice calls, send SMS and send e-mails. User select to enable. After setting, click "Save Settings".

Alert Settings	
Type of alert	<input type="text" value="Please select"/>
Associated action	<input type="checkbox"/> Upload alarm platform <input type="checkbox"/> Make a voice call <input type="checkbox"/> Send messages <input type="checkbox"/> Send email
<input type="button" value="Save Settings"/> <input type="button" value="Reset"/>	

The host will give priority to the network to send messages. When the network fails, it will enable GPRS to connect to the platform. When the network platform fails, the host will send data to the telephone alarm platform through GSM or PSTN, and the host will give priority to PSTN to send data.

The host can choose whether to send the data to the user or platform, and how to send it to the user. When the network fails, GPRS will be enabled to connect to the platform; when the network fails, the host will send the data to the telephone alarm platform through GSM or PSTN, and the host will give priority to PSTN. As shown in the figure below:

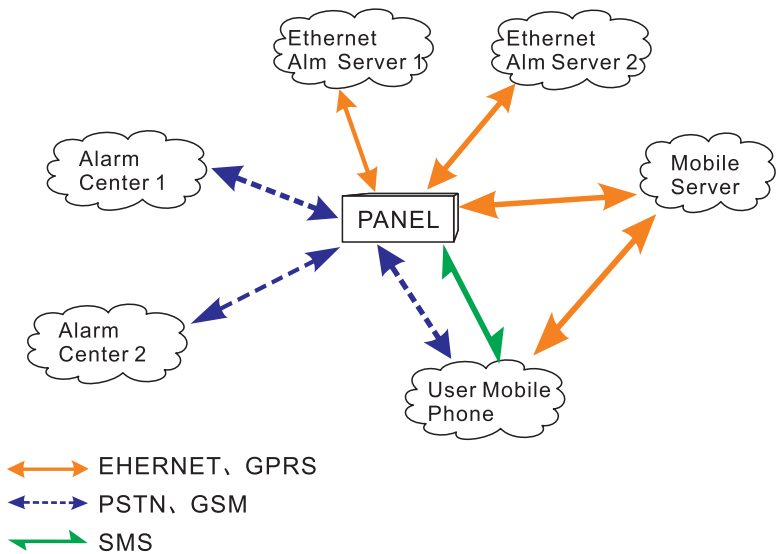

4.3 Password settings

Web administrator:the default account and password both are “admin”. Password settings should be case sensitive. Click “save” after changing.

System administrator: user can enter the keypad to set the host. The default password is 012345.

Password Settings

Web administrator

Username

admin

Old password

New password

Save

System administrator

Password

.....

Save

Primary user: it is used to login web page,password is 1234 by default. User can modify some settings in web IE interface.

General user: an general user can manage 1-4 partitions,which can only log in web IE to check settings and arm&disarm. After setting, click “save” .

Primary user

Master username

main

Master user password

....

Save

General user

Numbering

Please select

Username

Password

Authority

☐ Area 1

☐ Area 2

☐ Area 3

☐ Area 4

Save

4.4 Voice call settings

Four voice phones can be set, and one phone number can control 1-4 partitions. When an alarm occurs in the selected partition, the host will send information to the phone number of the partition. Enter “P” in the phone number and the dialing will pause for one second.

**Note: You need to turn on the phone/message function, enter the "Alert Settings" and check "Call Voice Call" and "Send SMS" for the phone/message function to take effect.*

Voice Call Settings

Basic parameters

Number of redials

6

(1-15)

Ring times

5

(0-15), set 0 to turn off the phone automatically off hook

Telephone number

No.1	<div>Call <input checked="" type="checkbox"/></div>	<div>SMS <input checked="" type="checkbox"/></div>	Associated area	<input type="checkbox"/> Area 1	<input checked="" type="checkbox"/> Area 2	<input checked="" type="checkbox"/> Area 3	<input type="checkbox"/> Area 4
No.2	<div>Call <input checked="" type="checkbox"/></div>	<div>SMS <input checked="" type="checkbox"/></div>	Associated area	<input checked="" type="checkbox"/> Area 1	<input type="checkbox"/> Area 2	<input type="checkbox"/> Area 3	<input type="checkbox"/> Area 4
No.3	<div>Call <input checked="" type="checkbox"/></div>	<div>SMS <input checked="" type="checkbox"/></div>	Associated area	<input checked="" type="checkbox"/> Area 1	<input type="checkbox"/> Area 2	<input type="checkbox"/> Area 3	<input type="checkbox"/> Area 4
No.4	<div>Call <input checked="" type="checkbox"/></div>	<div>SMS <input checked="" type="checkbox"/></div>	Associated area	<input checked="" type="checkbox"/> Area 1	<input type="checkbox"/> Area 2	<input type="checkbox"/> Area 3	<input type="checkbox"/> Area 4

Save Settings

Reset

Redial times: the number of voice calls in case of alarm. When the phone number 1 is not answered, the phone number 2 will be dialed. The default is redial 5 times.

Ringing times: dial the telephone number on the host, and the ringing times of the host automatically off hook (default 15 times).

After setting, click “Save Settings” .

4. 5 Timing Arm/Disarm

User can set a fixed time to arm/disarm the partition, 00:00 is invalid time, there are four groups of timing arm/disarm time in total.

Timed Arm / Disarm

Timing arm and disarm 1

Time00:00

Repeat cycle☒ Sunday☒ Monday☒ Tuesday☒ Wednesday☒ Thursday☒ Friday☒ Saturday

OperatingSystem disarm

Associated area☐ Area 1☒ Area 2☐ Area 3☒ Area 4

Timing arm and disarm 2

Time00:00

Repeat cycle☒ Sunday☒ Monday☒ Tuesday☒ Wednesday☒ Thursday☒ Friday☒ Saturday

OperatingSystem disarm

Associated area☐ Area 1☒ Area 2☐ Area 3☒ Area 4

Timing arm and disarm 3

Time00:00

Repeat cycle☒ Sunday☒ Monday☒ Tuesday☒ Wednesday☒ Thursday☒ Friday☒ Saturday

OperatingSystem disarm

Associated area☒ Area 1☐ Area 2☐ Area 3☐ Area 4

Timing arm and disarm 4

Time00:00

Repeat cycle☒ Sunday☒ Monday☒ Tuesday☒ Wednesday☒ Thursday☒ Friday☒ Saturday

OperatingSystem disarm

Associated area☒ Area 1☐ Area 2☐ Area 3☐ Area 4

Save Settings


Reset

5. System maintenance

5.1 System information

Display the host web page, voice, hardware and firmware version number.

Users can also use the mobile app to scan the QR code to add a host, see Chapter 5 about mobile app usage for details.

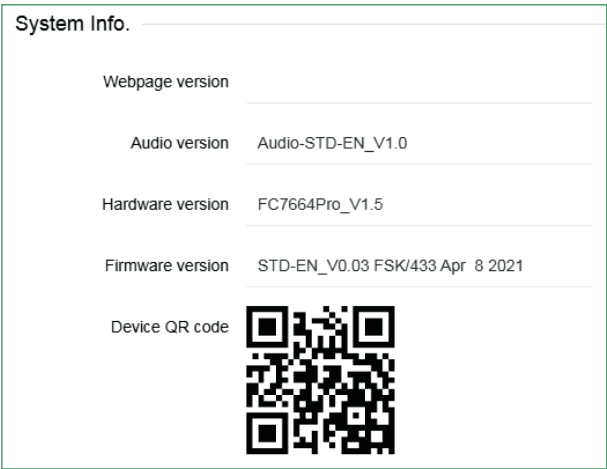

5.2 Time settings

Set time automatically: when it is turned on, it will automatically check the time with the timing server;

Automatic adjust to summer time:from 2:00 a.m. (Beijing time) on the first Sunday in the middle of April, set the clock one hour earlier, that is, to set the clock from 2:00 a.m. to 3:00 a.m. on the first Sunday in the middle of September, set the clock one hour earlier, that is, to set the clock from 2:00 a.m. to 1:00 a.m., and the daylight saving time ends. Automatic adjustment of daylight saving time is off by default.

Time server:the address of the server represents different time measurement standards.

Server port: the port corresponding to the time server.

Time update interval: 24 hours by default.

Time zone: click the drop-down menu to select.(Factory default:GMT+8:00)

You can modify the time manually at the current time. If "synchronize with computer time" is enabled, the manual setting is invalid. After setting, click "Save Settings".

Date And Time Settings

Set time automatically

ON

Automatic adjust to summer time

OFF

Time server

time.nist.gov

Server port

123

Time update interval

24

0 means update only once, unit is hour

Time zone

GMT+8:00

Current time

2021-04-10 10:14:56

Synchronize with computer time

Save Settings

Reset

5. 3 System restart

Click the “Restart now ” button, then pop up “Do you really want to restart?” , Click “OK” to restart.


System Restart

Restart now




5. 4 System backup

If you want to set the parameters of multiple hosts to the same configuration, you can export the set device parameters, and then import the exported files to other hosts to be set. Click "backup configuration file", the bottom of the screen prompts that the "bin" file has been downloaded.

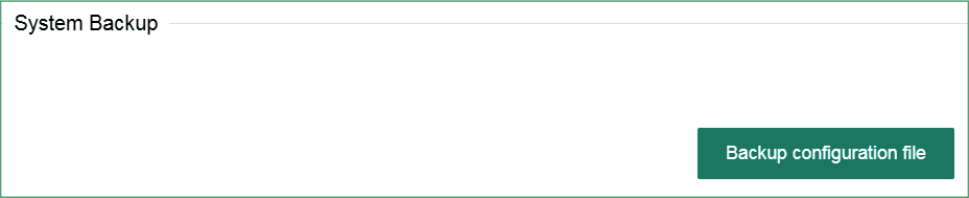


5. 5 System restore

Restore all the configuration of the host, click "load configuration file" and lead in the " Config.bin "file - "Restore.". The progress of restoration is displayed below the button. Please do not perform other operations during restoration.

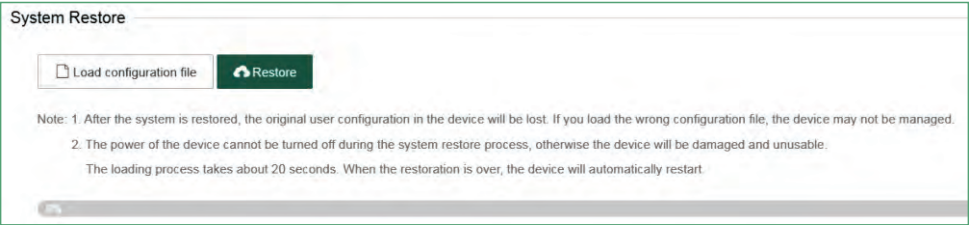


5. 6 System upgrade

The web program file is “ Web.bin ”, the voice program file is“ Audio.bin ”, the firmware program file is “ FC7664Pro.hex ”File, in the process of upgrading, there will be a green bar and percentage process display at the bottom of the page, please do not turn off the page and turn off the power in the process of upgrading. Restart the device after upgrading.

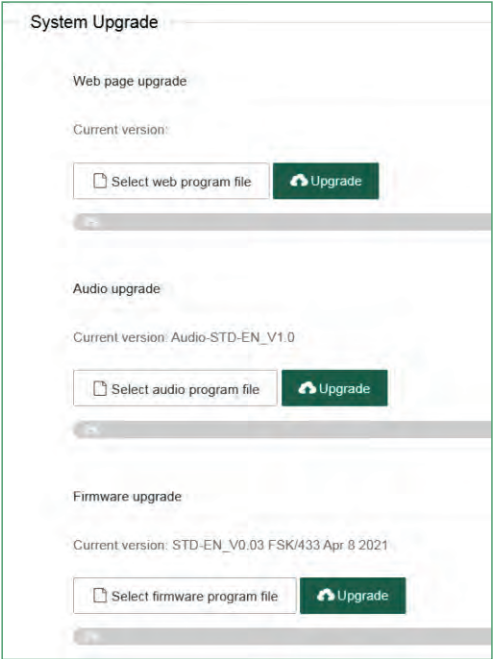

5. 7 Reset device

Restore the host to the factory preset settings, click "Reset" and enter the administrator password - "OK" in the pop-up menu. The host will automatically restart and take effect.

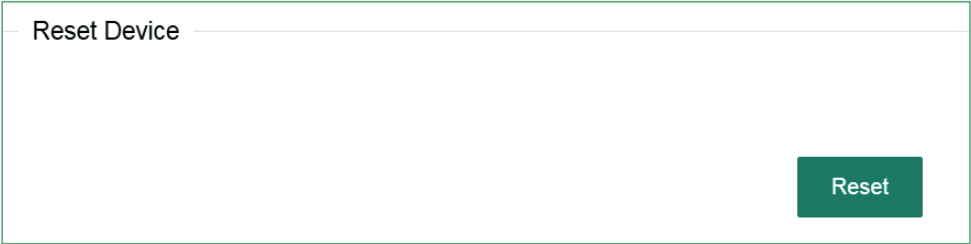

III. App use


1. Download and installation

Please scan QR code below to download IOS&Android app, or search "smartsecurity" in IOS&Googleplay store.



2. Account registration

Click to enter the APP login interface, new users please click "register", according to the prompt to complete the registration.

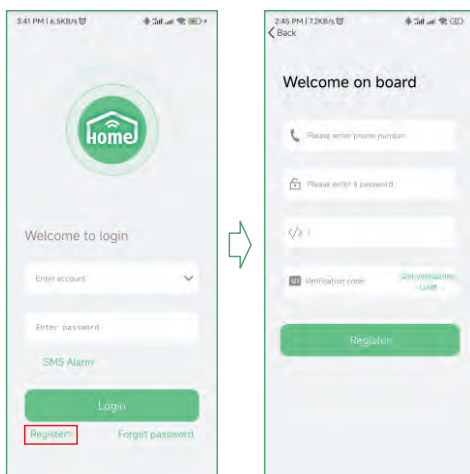

3. Add panel

After logging in the account, as shown in Fig 3.1, select "+" at the upper right "[]" to scan the QR code sticker on the device body or the QR code on the webpage to add the device.



Fig 3.1



Fig 3.2



Fig 3.3

Technical specifications

External AC power supply voltage: input 110 ~ 240VAC, output DC 15V/4A

Host built-in rechargeable battery (optional): 12V / 7Ah

Low battery voltage: $\leq 11V$

Backup battery duration: about 24 hours (when only one keyboard is connected)

Alarm dialing mode: internet alarm, telephone alarm and GSM alarm

DTMF dial frequency deviation: $< 1.5\%$

Communication protocol of central monitoring server: ADMCO Contact ID, SIA-2013, Meian Proprietary Agreement

Modulation mode: ASK / FSK (optional)

Wireless receiving and transmitting frequency: 433MHz / 868MHz (optional)

Recording time: 15 seconds

Wireless receiving range: open space (100-150m)

Working temperature range: 0°C to 45°C (32°F to 120°F)

Storage temperature range: - 20°C to 60°C (- 4°F to 140°F)

Humidity: 85% relative humidity at 30°C (86°F)

System maintenance

PERIODIC TESTING

The design idea of safety system is to let you maintain as little as possible. However, in order to ensure the reliability of the system, we still need to carry out "walking test" at least once in three months. If there is any problem, please consult the technician immediately.

CLEAN THE MAIN HOST

After using for a period of time, the host may be stained with oil or dust. Please clean with soft cotton cloth or sponge and wipe dry.

Note: please do not use any friction agent or organic solvent, such as kerosene, acetone, strong glue, etc. to wipe the case, so as not to damage the external appearance of the body.

Product function limitation

Although the alarm device you purchased is highly safe, it is still not 100% safe. No matter how advanced the alarm system is, there will be false alarm or failure. The reasons may be as follows:

Lack of maintenance: if the system is used for a long time, but maintenance and testing are not carried out immediately, the sensitivity of the detector may be reduced and false alarm or missing alarm may occur; the siren may also lose its function and cannot sound.

Power failure: if the AC power supply is cut off for a long time, and the backup battery is insufficient, the system will not continue to work normally, so that the protection area can not alarm accordingly even if there is an alarm.

Limitations of smoke detector: sometimes, because the alarm occurs on different floors of the house or is too far away from the detector, the smoke detector fails to receive a strong enough smoke signal, which will cause missed alarm.

The system fails to receive the alarm information: if the intruder uses the unprotected skylight and some unexpected entrances to enter, or the intruder has the relevant professional knowledge and knows how to find the method to make the alarm equipment fail, the alarm equipment will not report the alarm immediately.

In order to ensure the normal operation of the detector and the whole alarm system, it is recommended that users often carry out periodical testing. Even if the alarm system is installed for protection, users should also be cautious about the safety of their lives and property. We will continue to devote ourselves to the development of new security products. Please keep in touch with us so as to obtain our latest technical products and relevant information. Your support is the driving force of our work! If our series of products are updated, we will publish them on our website. Please visit our website to get the latest information.

