

Module Upgrading

Modules to be upgraded must be selected before the global upgrade button can be clicked. An indication in the group bar shows the modules that require an update.

In the below screenshot, you can see that the first sat-in module has to be upgraded because there is a white mark on its associated select square : .

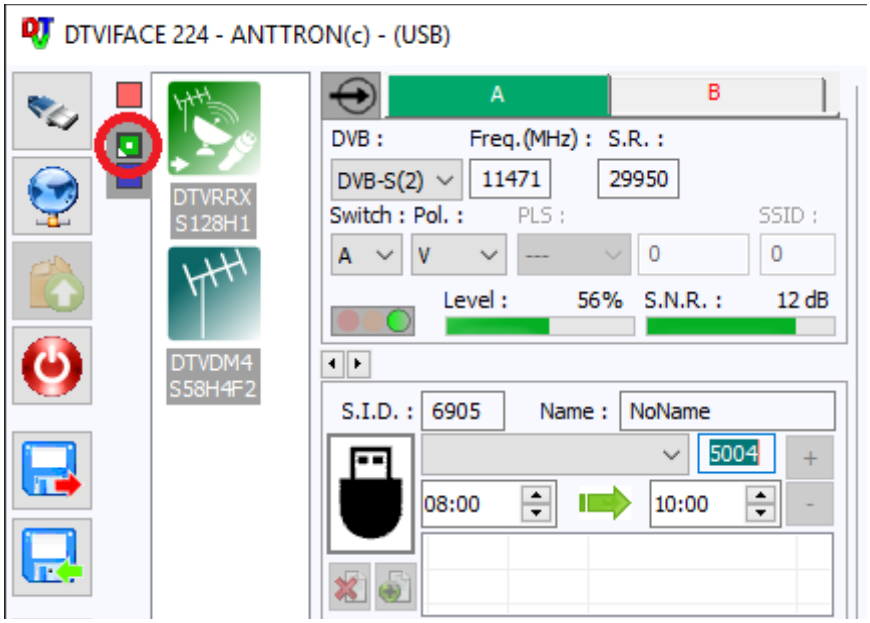

The upgrade button is however not already selectable because no module has been validated to be upgraded. To select the module to be upgraded, just double-click on its associated select square and the mark will become orange indicating the module will be upgraded when the upgrade button will be selected :

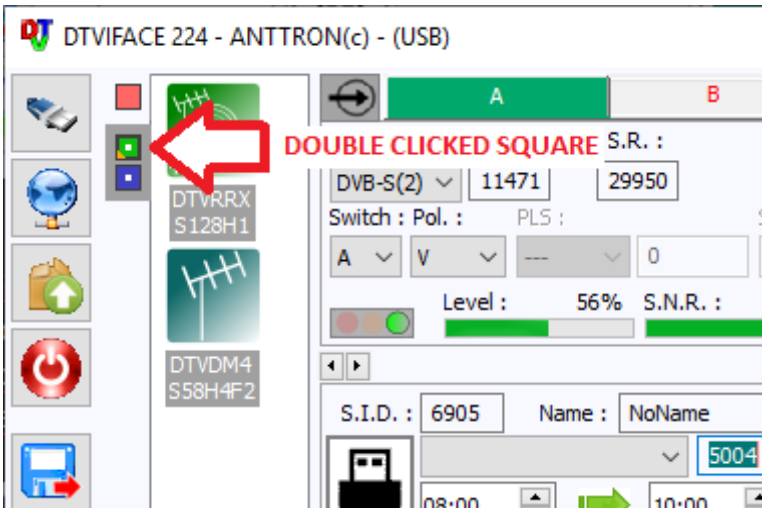

You can now click on and only the modules that have an orange mark will be upgraded.

CAUTION

1. The update process is lenghty so only select for upgrade the modules on which you want to fix a problem or add a feature.
2. Before upgrade, please deactivate all CAM watchdogs. You can reactive them later after the upgrade. They may interrupt upgrade process.
3. During upgrade, do not connect nor disconnect any USB devices on the PC even an USB key.
4. Ensure the PC will not go into power down mode during the process .